

Status of the documentation:  
24.11.2015

# KNX/IP router

## Order No. 2167 00



## Table of contents

|          |   |           |
|----------|---|-----------|
| <b>1</b> | <b><u>Productdefinition</u></b> .....                             | <b>4</b>  |
| 1.1      | Product catalogue .....   | 4         |
| 1.2      | Accessories:.....   | 4         |
| 1.3      | Application .....   | 4         |
| <b>2</b> | <b><u>Mounting, electrical connection and operation</u></b> ..... | <b>5</b>  |
| 2.1      | Safety notes .....  | 5         |
| 2.2      | Device components.....  | 6         |
| 2.3      | Mounting and electrical connection .....                          | 7         |
| 2.4      | Commissioning.....  | 9         |
| 2.4.1    | Factory reset .....   | 10        |
| 2.4.2    | Information on start-up .....                                     | 10        |
| 2.5      | Operation .....   | 11        |
| <b>3</b> | <b><u>Technical data</u></b> .....                                | <b>13</b> |
| <b>4</b> | <b><u>Software description</u></b> .....                          | <b>14</b> |
| 4.1      | Software specification .....                                      | 14        |
| 4.2      | Software "KNX/IP router V3.0 901B30" .....                        | 15        |
| 4.2.1    | Range of functions.....   | 15        |
| 4.2.2    | Information on the software .....                                 | 16        |
| 4.2.3    | Object table .....  | 17        |
| 4.2.4    | Functional description.....                                       | 18        |
| 4.2.5    | State of delivery.....  | 20        |
| 4.2.6    | Parameter .....   | 21        |
| 4.3      | Software "Router applications V3.0 901A10" .....                  | 26        |
| 4.3.1    | Range of functions.....   | 26        |
| 4.3.2    | Information on the software .....                                 | 27        |
| 4.3.3    | Object table .....  | 28        |
| 4.3.4    | Functional description.....                                       | 31        |
| 4.3.5    | State of delivery.....  | 33        |
| 4.3.6    | Parameter .....   | 34        |
| <b>5</b> | <b><u>Appendix</u></b> .....                                      | <b>37</b> |
| 5.1      | Operation as an area or line coupler .....                        | 37        |
| 5.2      | Operation as an IP data interface in the ETS3.....                | 39        |
| 5.3      | Operation as an IP data interface in the ETS4.....                | 43        |
| <b>6</b> | <b><u>License AgreementKNX/IP-Router Software</u></b> .....       | <b>47</b> |
| 6.1      | Definitions .....   | 47        |
| 6.2      | Subject matter of the agreement .....                             | 47        |
| 6.3      | Rights of use of theKNX/IP-Router software.....                   | 47        |
| 6.4      | Restriction of rights of use .....                                | 47        |
| 6.5      | Ownership, confidentiality.....                                   | 48        |
| 6.6      | Changes, additional deliveries.....                               | 48        |
| 6.7      | Warranty .....  | 48        |
| 6.8      | Liability .....   | 48        |

---

|          |  |                  |
|----------|--|------------------|
| 6.9      | Applicable law .....                                     | 49               |
| 6.10     | Termination.....   | 49               |
| 6.11     | Subsidiary agreements and changes to the agreement ..... | 49               |
| 6.12     | Exception.....   | 49               |
| <b>7</b> | <b><u>Open Source Software .....</u></b>                 | <b><u>50</u></b> |

## 1 Productdefinition

### 1.1 Product catalogue

Product name: KNX/IP router  
Application: gateway, data logger/IP interface  
Design: DRA (series installation)  
Order No.: 2167 00

### 1.2 Accessories:

Additional power supply  
Order No.: 1296 00  
KNX/EIB power supply 320 mA  
Order No.: 1086 00

### 1.3 Application

The KNX/IP router connects the Instabus KNX/EIB lines via data networks (Ethernet) using the Internet Protocol (IP). It uses the KNXnet/IP standard so that KNX/EIB telegrams can not only be forwarded between lines via an IP network, but bus access is also possible from a PC or other data processing devices.

The KNX/IP router can be used as an IP data interface for the ETS 3.0 Version "f" or higher or the ETS 4.0 or higher.

The device supports up to 4 KNXnet/IP tunnelling connections and thus enables parallel bus access, e.g. via the ETS and other PC software.

It has an integrated switch with two RJ45 connections. This enables several KNX/IP routers or other IP devices to be connected to the distribution without the aid of other active components.

The KNX/IP router can be used as an area or line coupler. In this function, it interconnects two KNX/EIB lines to form a logic functional area and guarantees electrical isolation between these lines. As a result, each bus line of a KNX/EIB installation can be operated electrically independent of the other lines. The exact function of the device is determined by its physical address.

The KNX/IP router can be used as a data logger. It incorporates a card reader for micro SDHC cards up to 32 GB. The KNX/EIB telegrams in an ETS3 or ETS4-compliant format can be recorded to the card for analysis purposes. The card memory can be used as a ring memory or as a ROM.

As a clock, the KNX/IP router can send the time and date to the bus at configurable intervals. Synchronisation with an NTP server is possible. It is possible to trigger the sending of the current time and the current date via a trigger.

The KNX/IP router requires a separate power supply 24..30V DC  $\pm 10\%$  to operate. The KNX/IP router is supplied with power by this operating power connection. Thus, it is possible for bus voltage failures to be reported via the data network.

## 2 Mounting, electrical connection and operation


### 2.1 Safety notes

Electrical devices may only be installed and mounted by a qualified electrician. Applicable accident prevention regulations must be observed.

Failure to observe the installation instructions can result in damage to the device, fire or other dangers.

Please refer to the operating instructions enclosed with the device for more information.

### 2.2 Device components

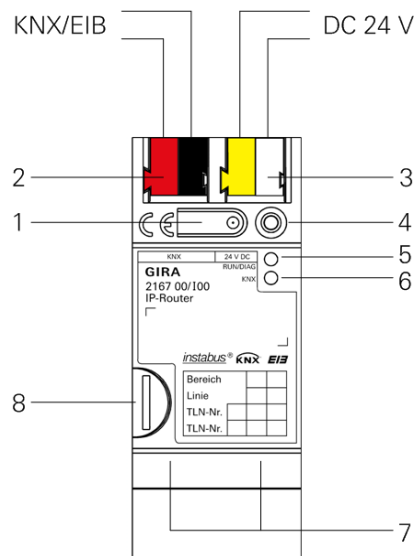

#### Dimensions:

Width (W):  
36 mm (2 TE)

Height (H):  
90 mm

Depth (D):  
74 mm

Figure 1: KNX/IP router

1 Programming button

2 KNX connection

3 External power supply connection\* 24..30V DC  $\pm 10\%$ .

4 Programming LED (red/yellow/orange)  
red = router  
yellow = router applications  
orange = router and router applications

5 LED operation display (green)  
on: Ready for operation  
flashing: Diagnosis code

6 LED KNX (yellow)  
on: KNX is connected  
off: KNX is not connected  
flashing: Router is receiving data on KNX/TP line or on KNX/IP line

7 Ethernet connection

- 10/100 speed (green)
  - on: 100 Mbit/s
  - off: 10 Mbit/s
- Link/ACT (orange)
  - on: link to IP network
  - off: no connection
  - flashing: data reception on IP

8 Micro SD card holder

### 2.3 Mounting and electrical connection

---

**DANGER!**

**Electric shock if live parts are touched. Electric shock may lead to death. Isolate connection cables before working on the device. Cover up live parts in the vicinity!**

---

#### Mounting the device

- Snap on the top-hat rail according to DIN EN 60715. Network connection must be located on the bottom.
- ⓘ A KNX/EIB data rail is not necessary.
- ⓘ Observe temperature range (0 °C...+45 °C) and ensure sufficient cooling if necessary.

#### Connecting the device

- Connecting the KNX/EIB bus to the KNX connection of the router (2) with a KNX/EIB connection terminal.
- Connecting the external power supply\* to the power supply connection (3) of the router using a KNX/EIB connection terminal (preferably yellow/white).
- Connecting one or two network lines to the network connection of the router (7).

Note: Only one KNX/IP router per KNX power supply should be connected to the additional 30 V DC supply. Otherwise, the KNX power supply may become overloaded following a power failure and subsequent return.


\*: The non-choked output of a KNX/EIB power supply unit can also be used as an external power supply. Ensure that the maximum number of KNX/EIB devices which can be operated with the KNX/EIB power supply unit is reduced accordingly.

### Mounting / removing the cover cap

A cover cap can be mounted for secure isolation to protect the bus connection / power supply connection from dangerous voltage, particularly in the connection area.

The cap is mounted with an attached bus and power supply terminal and a connected bus and power supply line to the rear.

- Mounting the cover cap: The cover cap is pushed over the bus terminal (compare with Figure 2.A) until it engages noticeably.
- Removing the cover cap: The cover cap is removed by pressing it in slightly on the side and pulling it off to the front (compare with Figure 2.B).

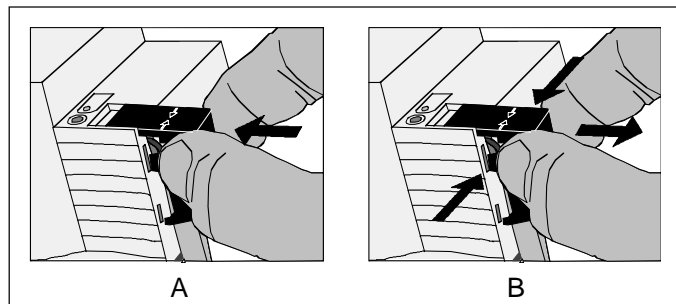

**Figure 2: Mounting / removing the cover cap**



### 2.4 Commissioning

After mounting the device and connecting the bus line, power supply and Ethernet, the device can be started up.

The following physical addresses are factory preset:

|                     |           |
|---------------------|-----------|
| Router              | 15.15.0   |
| Router applications | 15.15.255 |

These addresses have to be reprogrammed in order to be able to use the device. Without the imported application, the router works with default settings. The router and the router applications are secured against importing an incorrect application. The ETS will cancel the download in a case like this. However, as the physical address has already been programmed, the operation indication LED (5) of the device will show a projected status during the next start.

#### **Programming the physical address of the router**

Programming is done in the programming environment of the ETS (3.0f, 4.0 or higher). An additional KNX/EIB data interface is not required for programming. A connection to the device can be established via IP or KNX.

- Ensure that the device and bus voltage are switched on.
- Ensure that the programming LED (4) is not illuminated. If it lights up yellow, press the programming button (1) until it goes out (>4s).
- Briefly (<4s) press the programming button (1). Programming LED (4) lights up red.
- Program the physical address using the ETS. Programming LED (4) goes out after a successful programming process.
- Make note of the physical address on the device.
- If the device was programmed without an additional KNX/EIB data interface, the tunnelling connection must be set up again after the programming process.

#### **Programming the physical address of the router applications**

Programming is done in the programming environment of the ETS (3.0f, 4.0 or higher). An additional KNX/EIB data interface is not required for programming. A connection to the device can be established via IP or KNX.

- Ensure that the device and bus voltage are switched on.
- Ensure that the programming LED (4) is not illuminated. If it lights up red, press the programming button (1) as briefly as necessary to deactivate it (<4s).
- Press the programming button (1) for a long time (>4s). Programming LED (4) lights up yellow.
- Program the physical address using the ETS. Programming LED (4) goes out after a successful programming process.
- Make note of the physical address on the device.
- If the device was programmed without an additional KNX/EIB data interface, the tunnelling connection must be set up again after the programming process.

#### **Programming application programmes and configuration data**

After programming the physical address, the application programmes for the router and the router applications must be imported into the device. A connection to the device can be established via IP or KNX.

- Ensure that the device and bus voltage are switched on.
- Parameterise the respective device accordingly in the ETS.
- Import the software to the device.
- Wait approximately 10 seconds after the download, during which the device transfers the data.
- Commissioning is complete.

- If the device was programmed without an additional KNX/EIB data interface, the tunnelling connection must be set up again after the programming process.

### 2.4.1 Factory reset

The device can be reset to factory settings with the Gira Project Assistant.

- Ensure the device is switched on and has an Ethernet connection to the computer.
- Start the Gira Project Assistant (GPA) on the computer.
- In the GPA, open the main menu and then open the Action Centre.
- Click on the gear symbol in the KNX/IP router column to select the functions.
- Select the "Factory reset" function.
- The device is restarted and the factory reset is carried out.

Alternatively, a factory reset can be carried out directly on the device via a sequence during start-up if, for example, no Ethernet connection is possible.

- Make sure that the device is switched off.
- Press and hold the programming button (1) and switch on the device.
- Press and hold the programming button until the programming LED (4), the operation indication LED (5) and the KNX LED (6) slowly flash simultaneously. This happens after approx. 30 seconds.
- Briefly release the programming button (1), then press and hold it again until the programming LED (4), the operation indication LED (5) and the KNX LED (6) flash quickly simultaneously.
- The factory reset has been carried out.
- Release the programming button.
- The device need not be restarted following a factory reset.

The factory reset can be cancelled at any time by interrupting the sequence.

Following the factory reset, the device behaves as in the state of delivery. The device is unplanned. After starting up the device, this is indicated by the slowly flashing green operation indication LED (5). For the settings of the parameters please refer to the sections "4.2.5 State of delivery (router)" and "4.3.5 State of delivery (router applications)".

### 2.4.2 Information on start-up

For the router, programming the physical address as well as programming the application programme via KNX/IP routing is already possible when no KNX bus line is connected to the KNX connection (2). When programming via KNX/IP routing is started for the router applications, it will continue to run if the KNX bus connection is interrupted, ensuring that it is concluded successfully.

### 2.5 Operation

The KNX/IP router features 3 status LEDs on the top of the housing and 4 status LEDs on the network connection. In addition, there is a programming button with which the router and / or the router applications can be put into programming mode.

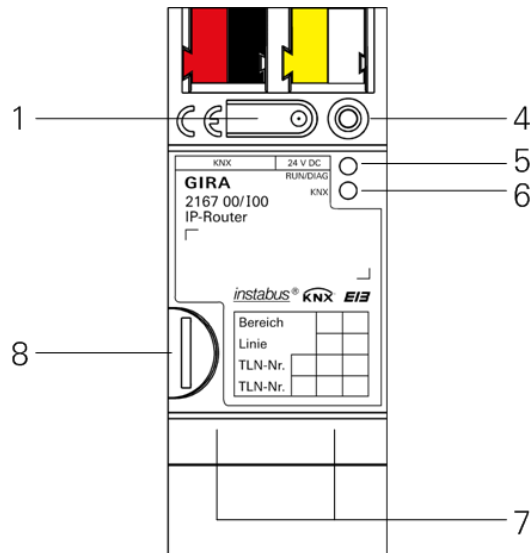


Figure 3: KNX/IP router

1 Programming button

4 Programming LED (red/yellow/orange)

red = router

yellow = router applications

orange = router and router applications

5 LED operation display (green)

on: Ready for operation

flashing: Diagnosis code

6 LED KNX (yellow)

on: KNX is connected

off: KNX is not connected

flashing: Router is receiving data on KNX/TP line or on KNX/IP line

7 Ethernet connection

- 10/100 speed (green)

on: 100 Mbit/s

off: 10 Mbit/s

- Link/ACT (orange)

on: link to IP network

off: no connection

flashing: data reception on IP

8 Micro SD card holder

### Diagnosis codes

The current device status can be concluded using the operation indication (5):

- LED off: Device is not switched on or not yet completely powered up.
- LED on: Device is ready for operation.
- LED flashes slowly (~1Hz): Device is not configured or was configured with impermissible parameters. The LED stops flashing when the application of the router and/or the router applications have been imported via the ETS. Refer to "2.4 Commissioning".
- LED flashes quickly (~4Hz): Internal device error. Please contact support.

### LED status when starting up the device

When the device is started up properly, the yellow LED (6) flashes when the operating voltage is applied, thus signalling the start-up process. Shortly afterwards the green LED (5) starts flashing. As soon as the device has completely started up, the green LED (5) lights up continuously if the device is already parameterised, or it flashes according to the diagnosis codes. From this time on, the yellow LED (6) signals the KNX bus status and KNX telegrams.

A self-test is carried out when the device is started up. If an error occurs here, the yellow LED (6) and the green LED (5) flash alternately directly after the operating voltage is applied. In this case, please contact support.

### Micro SD card holder (8)

A Micro SD card must be inserted for the data logger to be able to record telegrams. In addition, if a Micro SD card is inserted, a log file with system events is automatically created on the card. Cards up to a maximum of 32 GB are supported. The cards must be formatted with FAT32.

### 3 Technical data

|                     |   |
|---------------------|---|
| KNX medium          | TP  |
| Start-up mode       | S mode (ETS)  |
| KNX supply          | DC 21...30V SELV  |
| KNX connection      | Bus connection terminal   |
| External supply     |   |
| Voltage             | DC 24..30V ±10%   |
| Connection          | Connection terminal   |
| Power consumption   | typically 2W (for 24V DC, 2 Ethernet lines connected)   |
| IP communication    | Ethernet 10 /100 BaseT (10/100 MBit)  |
| IP connection       | 2 x RJ45  |
| Supported protocols | ARP, ICMP, IGMP, UDP/IP, DHCP, AutoIP<br>KNXnet/IP according to KNX system specification:<br>Core, Routing, Tunnelling, Device Management |
| Micro SD card       | max. 32 GByte   |
| RTC buffering       | ≥24h  |
| Ambient temperature | 0 °C to +45 °C  |
| storage temperature | -25 °C to +70 °C  |
| Installation width  | 36 mm (2 HP)  |
| Installation height | 90 mm   |
| Installation depth  | 74 mm   |
| Protection type     | IP20 (compliant with EN60529)   |
| Protection class    | III (compliant with IEC 61140)  |
| Test marks          | KNX, CE   |

## 4 Software description

### 4.1 Software specification

ETS search paths:     - System devices / IP router / KNX/IP router  
                          - Communication / router applications / KNX/IP router applications

Configuration:         S-mode standard

Applications:

| No. | Brief description   | Name                            | Version |
|-----|---------------------|---------------------------------|---------|
| 1   | KNX/IP router       | KNX/IP router V3.0 901B30       | 1.0     |
| 2   | Router applications | Router applications V3.0 901A10 | 1.0     |

Note:     In versions V1.0 and V2.0 of the KNX/IP router, the router applications were referred to as "data logger / clock".

## 4.2 Software "KNX/IP router V3.0 901B30"

### 4.2.1 Range of functions

- Simple connection to higher-level network systems by using the Internet Protocol (IP)
- Direct access from any point in the IP network to the KNX/EIB installation (supports group and bus monitor connections via KNXnet/IP tunnelling)
- Fast communication between KNX/EIB lines, areas and systems (KNXnet/IP routing)
- Communication across buildings and estates (networking of estates)
- Filtering and forwarding of telegrams, depending on:
  - physical address
  - group address
- Easy configuration from ETS 3f
- Failure message of the KNX/EIB system to applications via KNXnet/IP
- Support of up to 4 parallel KNXnet/IP tunnelling connections
- Simple connection of visualisation systems and facility management systems
- If a Micro SD card is inserted, there is automatic creation of a system log with important events for analysis purposes

## 4.2.2 Information on the software

- The KNX/IP router can be parameterised for ETS 3.0f or higher.
- When using ETS 3.0f, the Falcon must be updated to at least Version 2.0. The update can be obtained from the KNX homepage (<http://www.knx.org>) free of charge.
- The KNX/IP router is protected against importing an invalid application version.
- Router functionality is maintained without parameterised router applications.



## 4.2.3 Object table

Number of communication objects: 0

## 4.2.4 Functional description

### Monitoring for bus voltage failure

The KNX/IP router monitors the KNX bus for power failure. It can be configured so that a message is sent to the IP network if there is a state change to the bus voltage. This can be configured using the "Monitoring for bus voltage failure" parameter on the "General" parameter page. The default is "blocked".

If the parameter is activated, a TP bus voltage failure on the IP side will trigger a broadcast command (GA=0/0/0) of the type "NetworkParameterWrite".

The data content is "00063301" (hex) for bus voltage failure and "00063300" (hex) for bus voltage return. This command can for example be evaluated by the HomeServer with the reception of a simple IP telegram. (Setting: UDP/Multicast with the port 3671 and the corresponding IP addresses. Initially "any desired data" must first be received for the data blocks, and then the binary data "000633". The values "01" and "00" for failure and return respectively can be assigned to a 1-byte communication object.)

### IP address assignment

The device's IP address can either be assigned manually or via a DHCP server. This can be configured using the "IP address assignment" parameter on the "General" parameter page.

For the "Manual entry" setting, the values which are preset on the "IP address", "IP subnet mask" and "IP standard gateway" parameter pages are valid for the router. In the state of delivery, the router gets its IP address from a DHCP server.

For the "From DHCP service" setting, a DHCP server must assign the KNX/IP router a valid IP address. If there is not a DHCP server available for this setting, the router starts up after a certain waiting time with an AutoIP address (address range from 169.254.1.0 to 169.254.254.255). As soon as a DHCP server is available, the device is automatically assigned a new IP address.

### IP routing multicast address

The IP routing multicast address determines the target address of the KNX/IP router's IP telegrams. The default setting is 224.0.23.12. This is the address determined for KNX IP devices by the KNX Association in conjunction with the IANA. It should only be changed if it becomes necessary due to the existing network. In the process, it must be observed that all KNX IP devices which should communicate with one another via IP must use the same IP routing multicast address. The corresponding setting can be carried out on the "General" parameter page.

If a new IP routing multicast address is loaded to the device per KNX/IP routing, the ETS outputs the error message "Download failed". Redownloading should then run without issues. This behaviour is due to the system.

### Telegram filtering

The KNX/IP router can filter telegrams both from KNX to IP as well as in the other direction. For this, there are the parameters "Group telegrams of the main group 0-13" and "Group telegrams of the main group 14-31" on the "Bus > IP" and "IP > Bus" parameter pages. For telegrams of the main groups 0-13, the options "forward", "block" and "filter (normal)" are available. If this parameter is set to "filter (normal)", a filter table is created automatically by the ETS and also loaded to the device during downloading. For telegrams of the main groups 14-31, the options "forward" and "block" are available. Filtering is not possible here as the ETS does not provide a corresponding filter table.

In addition, a filter option for individually (physically) addressed telegrams and broadcast telegrams is available for both communication directions. This can either be forwarded, blocked or filtered. The corresponding parameter is located on the "Bus > IP" and "IP > Bus" parameter pages.

### Acknowledgement of group telegrams

From the KNX side, the KNX/IP router can either confirm all group-oriented telegrams or only those telegrams which are forwarded from KNX to IP. In this case, only those telegrams are confirmed which

are entered in the filter table of the device. The respective "Acknowledgement of group telegrams" parameter is located on the "Bus IP" parameter page. The default is "for forwarding".

### **Automatic creation of a system log when a Micro SD card is inserted**

If a Micro SD card is inserted in the device, a system log is automatically created on the card. This log is saved in the card's root directory in the file System.txt. Important system events are noted in this log. Specifically, these events are:

- Programming the router applications
- Setting the time via KNX or NTP
- Error during NTP synchronisation
- Change of the IP address
- KNX power failure
- KNX voltage recovery
- Restarting the device
- KNX bus status when starting up the device
- Fill level warning when 70 %, 80 % and 90 % of the SD card memory capacity is reached
- SD card full and resulting end of system event logging


The System.txt file can have a maximum size of 1 megabyte. If this size is exceeded, the current System.txt is renamed System.bak and a new System.txt file is created. If this again exceeds the 1 megabyte limit, the old System.bak is overwritten and a new System.txt file is created.

Micro SDHC cards up to a maximum of 32 GB are supported. The cards must be formatted with FAT32.


## 4.2.5 State of delivery

|  |                    |
|--|--------------------|
| Physical address                               | 15.15.0            |
| physical address of the tunnelling connections | 15.15.255          |
| Device name                                    | Gira KNX/IP router |
| Monitoring for bus voltage failure             | blocked            |
| TTL  | 128                |
| IP address assignment                          | from DHCP service  |
| IP address                                     | DHCP               |
| IP routing multicast address                   | 224.0.23.12        |
| IP subnet mask                                 | DHCP               |
| IP standard gateway                            | DHCP               |
| Bus > IP                                       |                    |
| Group telegrams of the main group<br>0-13      | filter (normal)    |
| Group telegrams of the main group<br>14-31     | forward            |
| Individually addressed telegrams               | filter (normal)    |
| Broadcast telegrams                            | forward            |
| Acknowledgement of group telegrams             | for forwarding     |
| IP > Bus                                       |                    |
| Group telegrams of the main group<br>0-13      | filter (normal)    |
| Group telegrams of the main group<br>14-31     | forward            |
| Individually addressed telegrams               | filter (normal)    |
| Broadcast telegrams                            | forward            |

## 4.2.6 Parameter

| Description:  | Values:   | Comments:   |
|---|---|---|
|  General |   |   |
| Device name (maximum of 30 characters)  | max. 30 characters, <b>Gira KNX/IP router</b>                               | Via this parameter, the KNX/IP router receives a unique name of a maximum of 30 characters which serves the simple recognition of the device when searching with a KNXnet/IP visualisation or with the ETS.   |
| Monitoring for bus voltage failure  | <b>blocked</b>  | Defines if a bus voltage status change is signalled in the IP network.  |
| TTL   | approved<br>0..255, <b>128</b>  | Defines the lifetime ( <b>Time To Live</b> ) of data packets in IP communication. The value defines the number of stops the data packet may pass before it is declared invalid and ignored.   |
| IP address assignment   | <b>from DHCP service</b><br><br>manual entry                                | Defines if the IP address of the device is assigned manually or automatically (by the DHCP server).   |
| IP routing multicast address  | <b>Use system multicast address</b><br><br>Use individual multicast address | <p>The IP address for KNXnet/IP routing is set with this and the four following parameters. Bus telegrams are forwarded from one IP router to all other IP routers via KNXnet/IP routing. In doing so, only the IP routers communicate which use the same IP routing multicast address.</p> <p>The factory-set default value is "Use system multicast address". In this case, the device communicates via 224.0.23.12. This address is assigned to KNXnet/IP routing and reserved for this application. However, all addresses in the 224.0.0.0 to 239.255.255.255 range can be used in a network for general use. In order to use an address from this range, the parameter must be set to "Use individual multicast address".</p> <p>An individual address can then be parameterised with the "Byte1" to "Byte4" parameters.</p> <p>If a new IP routing multicast address is loaded to the device per KNX/IP routing, the ETS outputs the error message "Download failed". Redownloading should then run without issues. This behaviour is due to the system.</p> |

|                    |                      |   |
|--------------------|----------------------|---|
| Byte 1 (224...239) | 224..239, <b>224</b> | Defines the IP routing multicast address if an individual multicast address is used. The address is compiled of 4 individual bytes. Default is 224.0.23.12. |
| Byte 2 (0...255)   | 0..255, <b>0</b>     |   |
| Byte 3 (0...255)   | 0..255, <b>23</b>    |   |
| Byte 4 (0...255)   | 0..255, <b>12</b>    |   |

 IP address

|                  |                    |  |
|------------------|--------------------|--|
| IP address       |                    | Defines the IP address of the KNX/IP router if manual address assignment is activated. The address is compiled of 4 individual bytes. Default is 192.168.0.10. |
| Byte 1 (0...255) | 0..255, <b>192</b> |  |
| Byte 2 (0...255) | 0..255, <b>168</b> |  |
| Byte 3 (0...255) | 0..255, <b>0</b>   |  |
| Byte 4 (0...255) | 0..255, <b>10</b>  |  |

 IP subnet mask

|                  |                    |  |
|------------------|--------------------|--|
| IP subnet mask   |                    | Defines the IP subnet mask of the KNX/IP router if manual address assignment is activated. The mask is compiled of 4 individual bytes. Default is 255.255.255.0. |
| Byte 1 (0...255) | 0..255, <b>255</b> |  |
| Byte 2 (0...255) | 0..255, <b>255</b> |  |
| Byte 3 (0...255) | 0..255, <b>255</b> |  |
| Byte 4 (0...255) | 0..255, <b>0</b>   |  |

 IP standard gateway

|                     |                  |  |
|---------------------|------------------|--|
| IP standard gateway |                  | Defines the IP address of the standard gateway if manual address assignment is activated. The address is compiled of 4 individual bytes. Default is 0.0.0.0. |
| Byte 1 (0...255)    | 0..255, <b>0</b> |  |
| Byte 2 (0...255)    | 0..255, <b>0</b> |  |
| Byte 3 (0...255)    | 0..255, <b>0</b> |  |
| Byte 4 (0...255)    | 0..255, <b>0</b> |  |

 DNS

|                  |                  |   |
|------------------|------------------|---|
| Primary DNS      |                  | Defines the IP address of the first DNS server to be used if manual address assignment is activated. The address is compiled of 4 individual bytes. Default is 0.0.0.0. |
| Byte 1 (0...255) | 0..255, <b>0</b> |   |
| Byte 2 (0...255) | 0..255, <b>0</b> |   |
| Byte 3 (0...255) | 0..255, <b>0</b> |   |
| Byte 4 (0...255) | 0..255, <b>0</b> |   |

|                  |                  |  |
|------------------|------------------|--|
| Secondary DNS    |                  | Defines the IP address of the second DNS server to be used if manual address assignment is activated. It is automatically used if the first DNS server cannot be reached. The address is compiled of 4 individual bytes. Default is 0.0.0.0. |
| Byte 1 (0...255) | 0..255, <b>0</b> |  |
| Byte 2 (0...255) | 0..255, <b>0</b> |  |
| Byte 3 (0...255) | 0..255, <b>0</b> |  |
| Byte 4 (0...255) | 0..255, <b>0</b> |  |

 Bus > IP

Group telegrams of the  
main group 0-13

How to proceed with telegrams with group addresses of the main groups 0-13 is determined with this parameter. They can either be forwarded, blocked or filtered.

forward

All telegrams with group addresses of the main groups 0 to 13 are forwarded from the KNX bus to IP.

block

All telegrams with group addresses of the main groups 0 to 13 from the KNX bus to IP are blocked.

**filter (normal)**

All telegrams with group addresses of the main groups 0 to 13 from the KNX bus to IP are filtered according to the filter table. The filter table is calculated automatically by the ETS.

Group telegrams of the  
main group 14-31

How to proceed with telegrams with group addresses of the main groups 14-31 is determined with this parameter. They can either be forwarded or blocked. Filtering is not an option here as the ETS does not calculate a filter table for these main groups.

**forward**

All telegrams with group addresses of the main groups 14-31 are forwarded from the KNX bus to IP.

block

All telegrams with group addresses of the main groups 14-31 from the KNX bus to IP are blocked.

Individually addressed  
telegrams


How to proceed with individually addressed telegrams is determined with this parameter. They can either be forwarded, blocked or filtered.

forward

All individually addressed telegrams are transferred from the KNX bus to IP.

block

Individually addressed telegrams are blocked by the KNX/IP router. With this setting, it is not possible to send individually addressed telegrams from the line in a lower level than the KNX/IP router to another line (e.g. during programming).

|  |                        |  |
|--|------------------------|--|
|  | <b>filter (normal)</b> | Only the individually addressed telegrams which should leave the line of the KNX/IP router are transmitted from the KNX bus to IP.   |
| Broadcast telegrams  |                        | How to proceed with broadcast telegrams is determined with this parameter. They can either be forwarded or blocked.  |
|  | <b>forward</b>         | All broadcast telegrams are transferred from the KNX bus to IP.  |
|  | block                  | Broadcast telegrams are blocked by the KNX/IP router. With this setting, it is not possible to send broadcast telegrams from the line in a lower level than the KNX/IP router to another line. |
| Acknowledgement of group telegrams   |                        | This parameter determines when the KNX/IP router should confirm group telegrams with a telegram.   |
|  | <b>for forwarding</b>  | Only those group telegrams which are also forwarded to IP are confirmed with a telegram. This means that only telegrams which are also entered in the filter table are confirmed.              |
|  | always                 | All group telegrams on the KNX bus are confirmed by the KNX/IP router with a telegram.   |
|  IP > Bus |                        |  |
| Group telegrams of the main group 0-13   |                        | How to proceed with telegrams with group addresses of the main groups 0 to 13 is determined with this parameter. They can either be forwarded, blocked or filtered.                            |
|  | forward                | All telegrams with group addresses of the main groups 0 to 13 are forwarded from the IP to the KNX bus.  |
|  | block                  | All telegrams with group addresses of the main groups 0 to 13 from the IP to the KNX bus are blocked.  |
|  | <b>filter (normal)</b> | All telegrams with group addresses of the main groups 0 to 13 from IP to the KNX bus are filtered according to the filter table. The filter table is calculated automatically by the ETS.      |



Group telegrams of the main group 14-31

How to proceed with telegrams with group addresses of the main groups 14-31 is determined with this parameter. They can either be forwarded or blocked. Filtering is not an option here as the ETS does not calculate a filter table for these main groups.

**forward**

All telegrams with group addresses of the main groups 14-31 are forwarded from the IP to the KNX bus.

block

All telegrams with group addresses of the main groups 14 to 31 from the IP to the KNX bus are blocked.

Individually addressed telegrams

How to proceed with individually addressed telegrams is determined with this parameter. They can either be forwarded, blocked or filtered.

forward

All individually addressed telegrams are transferred from the IP to the KNX bus.

block

Individually addressed telegrams from the IP to the KNX bus are blocked.

**filter (normal)**

Only the individually addressed telegrams which are addressed in the line of the KNX/IP router are transmitted from the IP to the KNX bus.

Broadcast telegrams

How to proceed with broadcast telegrams is determined with this parameter. They can either be forwarded or blocked.

**forward**

All broadcast telegrams are transferred from the IP to the KNX bus.

block

Broadcast telegrams from the IP to the KNX bus are blocked.

## 4.3 Software "Router applications V3.0 901A10"

### 4.3.1 Range of functions

- Clock
  - The current time and current date are sent to the bus periodically.
  - Triggering of the sending of the current time and date by means of a group telegram (trigger).
- Timekeeper
  - Receives the current time and / or the current date from the bus.
- Data logger
  - Records all KNX telegrams of the higher-level and lower-level lines to a Micro SD card.
- NTP
  - Requesting current time and date from NTP server
- Reliable communication
  - Expansion of the KNXnet/IP protocol for minimising data loss in communication between KNX devices


## 4.3.2 Information on the software

- Router applications can be parameterised from ETS 3.0f.
- Router applications are protected against importing an invalid application version.
- If the parameters for the time zone or for using reliable communication are changed, the device automatically restarts after successful programming of the application.


### 4.3.3 Object table

Number of communication objects: 13  
 Number of addresses (max): 60  
 Number of assignments (max): 60  
 Dynamic table management: No  
 Maximum table length: 255


Function: Clock

| Object  | Function | Name | Type    | DP type | Flag* |
|---|----------|------|---------|---------|-------|
|  1         | Send     | Time | 3 bytes | 10.001  | C, T  |
| Description: 3 byte object for sending the current time. The interval can be parameterised. |          |      |         |         |       |


Function: Clock

| Object  | Function | Name | Type    | DP type | Flag* |
|---|----------|------|---------|---------|-------|
|  2         | Send     | Date | 3 bytes | 11.001  | C, T  |
| Description: 3 byte object for sending the current date. The interval can be parameterised. |          |      |         |         |       |


Function: Clock

| Object   | Function | Name                   | Type  | DP type | Flag* |
|--|----------|------------------------|-------|---------|-------|
|  3  | Receive  | Trigger send date/time | 1 bit | 1.001   | C, W  |
| Description: 1 bit object for triggering the sending of the current time/date if the object has been assigned any desired value. |          |                        |       |         |       |


Function: Timekeeper

| Object  | Function | Name | Type    | DP type | Flag* |
|---|----------|------|---------|---------|-------|
|  4 | Receive  | Time | 3 bytes | 10.001  | C, W  |
| Description: 3 byte object for receiving the current time.                            |          |      |         |         |       |

Function: Timekeeper


| Object  | Function | Name | Type    | DP type | Flag* |
|---|----------|------|---------|---------|-------|
|  5 | Receive  | Date | 3 bytes | 11.001  | C, W  |
| Description: 3 byte object for receiving the current date.                            |          |      |         |         |       |

Function: Data logger

| Object   | Function | Name                 | Type  | DP type | Flag*   |
|--|----------|----------------------|-------|---------|---------|
|  6  | Receive  | Activate data logger | 1 bit | 1.001   | C, R, W |
| Description: 1 bit object to activate the data logger. When a "1" is assigned to the object, the data logger is active. If a "0" is assigned to it, it is deactivated. |          |                      |       |         |         |


Function: Data logger

---

| Object  | Function | Name               | Type  | DP type | Flag*   |
|---|----------|--------------------|-------|---------|---------|
|  7   | Send     | Data logger status | 1 bit | 1.001   | C, R, T |
| Description: 1-bit object which reflects the state of the data logger. If the object has a value of "1", the data logger is active. A "0" means that the data logger is inactive. |          |                    |       |         |         |


---

Function: Data logger  
Parameter: Memory type = ROM  
Memory status type = binary

| Object   | Function | Name                 | Type  | DP type | Flag* |
|--|----------|----------------------|-------|---------|-------|
|  8  | Send     | SD card memory state | 1 bit | 1.001   | C, R  |
| Description: 1-bit object for display of the filling state of the SD card. When a "1" is assigned to the object, the SD card is full. If it is assigned a "0", then there is still space for logging on the SD card. |          |                      |       |         |       |


---

Function: Data logger  
Parameter: Memory type = ROM  
Memory status type = value (0-255)

| Object   | Function | Name                         | Type   | DP type | Flag* |
|--|----------|------------------------------|--------|---------|-------|
|  9  | Send     | SD card memory filling state | 1 byte | 5.001   | C, R  |
| Description: 1-bit object for displaying the filling state of the SD card. The value range is 0-255 (equivalent to 0-100 %). |          |                              |        |         |       |


---

Function: NTP

| Object  | Function | Name       | Type  | DP type | Flag*   |
|---|----------|------------|-------|---------|---------|
|  10  | Send     | NTP status | 1 bit | 1.001   | C, R, T |
| Description: 1-bit object for display of the status of the last NTP query. If the NTP query was successful and the system time has been reset as a result or if there was an error during the previous query, the object is assigned a "1". If the last NTP query was not successful, the object is assigned a "0". |          |            |       |         |         |


---

Function: Data logger

| Object  | Function | Name                | Type  | DP type | Flag* |
|---|----------|---------------------|-------|---------|-------|
|  11  | Send     | Bus voltage failure | 1 bit | 1.001   | C, T  |
| Description: 1-bit object which signals the status of the bus voltage. A "1" is sent in case of bus voltage failure. A "0" is sent in case power is restored. |          |                     |       |         |       |

---

Function: Always


| Object   | Function | Name          | Type  | DP type | Flag*   |
|--|----------|---------------|-------|---------|---------|
|  13 | Send     | SD card error | 1 bit | 1.001   | C, R, T |

---

Description: 1-bit object for signalling an SD card error. When a "1" is assigned to the object, an SD card error has occurred.

---

Function: Always

| Object   | Function | Name          | Type   | DP type | Flag* |
|--|----------|---------------|--------|---------|-------|
|  14 | Send     | SD error code | 1 byte |         | C, R  |

Description: 1-bit object for signalling an SD card error.  
0 = SD card OK  
1 = SD card full  
2 = SD card not inserted  
4 = Fault has occurred in SD card (e.g. incorrectly formatted)

\*The default values are specified.

## 4.3.4 Functional description

### Clock

As a clock, the device can send the current time to the bus at configurable intervals. For this, first the "Time function" parameter must be set to "Clock" in the "General" parameter view so that the further configuration parameters become visible. With the "Send time" and "Send date" parameters, the respective desired interval can be configured. The time sent is obtained from the system time. This can be synchronised with a configurable NTP server. For this, the "Use NTP server" parameter must be set to "Yes" in the "General" parameter view. Then the NTP server can be configured in the newly available "NTP configuration" parameter view.

The device can be configured for various UTC time zones. The "Time zone" parameter used for this is located in the "General" parameter view.

Time changeover is taken into account either automatically depending on the time zone set or not at all. A "Generic Time Zone w/o DST" must be parameterised so that no automatic time changeovers are carried out.

If an NTP server is used, the clock will only send the date and time if at least one successful NTP synchronisation has been executed after device start-up. This is to prevent the sending of a wrong system time even if the the NTP function is activated.

With the clock function, a communication object is provided with which the sending of the time/date can be triggered (trigger). For more details, see "4.3.3 Object table".

The time function is deactivated at delivery.

### Timekeeper

As a timekeeper, the device synchronises the system time with time information from KNX time telegrams which for example can be sent from clocks or the ETS. For this, the "Time function" parameter must be set to "Timekeeper" in the "General" parameter view.

The time function is deactivated at delivery.

### Bus voltage monitoring

The device monitors the bus voltage and provides a communication object for this purpose. If the group address of the communication object is entered in the filter table of the router, the notification of the bus voltage state will not only be sent via TP, but also via IP.

For more details, see "4.3.3 Object table".

### Data logger

The device can be used as a data logger. The data logger functionality is controlled via the "Data logger" parameter in the "General" parameter view. If it is set to "Yes", the data logger functionality is always activated. If a Micro SD card is inserted into the device or if there is already a card in the device, logging begins automatically if it is not deactivated via the "Activate data logger" communication object.

The data logger state is sent via the "Data logger status" communication object, however can also be queried directly. The communication object has the value 1 for as long as the data logger is active. If the SD card is removed, then no memory capacity is available, or if the data logger is deactivated via the "Activate data logger" communication object, the "Data logger status" communication object assumes the value "0" and sends it.

The data logger supports two types of memory management. The SD card memory can be used as ROM or as a ring memory. When used as a ring memory, the remaining memory is monitored. When the remaining memory capacity drops below 2.5 Mbyte, the oldest log file is deleted to create space for new data.

When used as ROM, logging is automatically ended as soon as the Micro SD card is full until a new card with sufficient capacity is inserted.

Via the "Data logging format" parameter in the same parameter view, it can be configured whether an ETS3 (.trx) or an ETS4 (.xml) compliant data format should be used. The data logger can be activated or deactivated via the "Activate data logger" communication object.

Naming and saving the log files on the Micro SD card is in accordance with the following scheme:

```
Year  
----Month  
-----Day  
-----2010_01_06_LAN.trx  
-----2010_01_06_TP1.trx
```

If there is a loss of voltage and a resulting loss of time/date, a file name can be repeated. In this case, a tilde (~) is attached to the end of the file name. For further repetitions, consecutive numbers (~1) are added to the tilde.

Before the Micro SD card is removed, logging should be deactivated to prevent damage to the card.

The KNX/IP router supports SDHC cards up to a maximum of 32GB. The cards must be formatted with FAT32.

Various communication objects are available for monitoring the memory status. The current card status and the fill level are queried via these communication objects. For more details, see "4.3.3 Object table".

### **Reliable communication**

Reliable communication can be activated for the device. This is an extension of the KNXnet/IP protocol that serves to minimise data loss in communication over potentially unreliable connections. This is recommended for communication via WLAN, for example.

To use reliable communication, suitable components (e.g. the Gira G1 or other KNX/IP router) for which reliable communication has also been activated must be used in the system.

Via the "Use Reliable communication?" parameter in the "Reliable communication" parameter view of the ETS, this function can be activated.

If this parameter is changed, the router restarts directly after downloading the application.

The router should always be programmed separately.


Reliable communication is deactivated in the state of delivery.





## 4.3.5 State of delivery

|                             |                           |
|-----------------------------|---------------------------|
| Physical address            | 15.15.255                 |
| Time function               | None                      |
| Data logger                 | No                        |
| Time zone                   | (UTC+01:00) Europe/Berlin |
| Use NTP server              | No                        |
| Use reliable communication? | No                        |

## 4.3.6 Parameter

| Description:  | Values:  | Comments:   |
|---|--|---|
|  General |  |   |
| Time function   | <p><b>None</b></p> <p>Clock</p> <p>Timekeeper</p>          | <p>This parameter determines which time function the device executes.</p> <p>No time function is executed.</p> <p>The device works as a clock and sends the current time and date to the bus at configurable intervals.</p> <p>If an NTP server is used in addition, the date/time will only be sent if the system time was synchronised at least once since the device started up.</p> <p>The device works as a timekeeper and receives the time telegrams sent from a clock and evaluates them.</p> |
| Send time   | <p><b>Each minute</b></p> <p>Each hour</p> <p>Each day</p> | <p>Only visible when the device works as a clock. The interval for sending the time to the bus is configured with this parameter.</p>   |
| Send date   | <p><b>Each minute</b></p> <p>Each hour</p> <p>Each day</p> | <p>Only visible when the device works as a clock. The interval for sending the date to the bus is configured with this parameter.</p>   |
| Data logger   | <p><b>No</b></p> <p>Yes</p>                                | <p>This parameter determines whether the data logger function is activated. The corresponding communication objects are only available when it is activated.</p> <p>The data logger function is deactivated.</p> <p>The data logger function is activated.</p>  |
| Data logging format   | <p><b>ETS4</b></p> <p>ETS3</p>                             | <p>Only visible when "Data logger" is set to "Yes". This parameter determines which format the data should be logged in on the Micro SD card.</p> <p>The data is stored in an ETS4-compliant format (.xml) which is also readable by the ETS5.</p> <p>The data is stored in an ETS3-compliant format (.trx).</p>  |

|   |  |  |
|---|--|--|
| Data logger memory type   |  | Only visible when "Data logger" is set to "Yes". This parameter specifies how the SD card memory is to be used.  |
|   | Ring memory  | The SD card memory is used as a ring memory.   |
|   | <b>ROM</b>   | The SD card memory is used as ROM.   |
| Data logger memory status type  |  | Only visible when "Data logger" is set to "Yes" and the "Data logger memory type" is set to "ROM". This parameter specifies what type the status object of the card fill level is to correspond to.  |
|   | Binary   | A 1-bit object is used. The value "1" means that the card is full, "0" means that there is still space on the card for logging.  |
|   | <b>Value (0-255)</b>                                     | A 1-byte object is used. The value range is between 0 – 255. The value "255" corresponds to a card fill level of 100 %.  |
| Time zone   |  | The time zone the device works with is configured with this parameter.   |
|   | <b>(UTC+01:00) Europe/Berlin</b><br>Other UTC time Zones | The time zone to be used is selected here. There are several time zones with identical UTC deviations. In some of these time zones, summer/winter time switchover is at a different time. One of the "Generic Time Zone w/o DST" time zones must be selected so that no automatic time changeovers are carried out.<br><br>If this setting is changed, the router will restart directly after the application has been programmed! |
| Use NTP server  |  | Whether an NTP server should be used is determined with this parameter. It is only taken into account in operation as a clock.   |
|   | <b>No</b>  | No NTP server is used. The system time serves as a reference.  |
|   | Yes  | An NTP server is used.   |
|  NTP configuration |  | Only available when an NTP server is used.   |

|   |   |
|---|---|
| NTP server address  | <p>This parameter defines the host name or the IP address of the NTP server to be used. When using a manual IP address for the router, a DNS server must be parameterised so that defining a host name is possible.</p>   |
| <p>NTP interval (min)      <b>60</b><br/>1..65535</p>   | <p>This parameter determines at which interval the time should be synchronised to the NTP server. The information is in minutes.</p>  |
| <p> Reliable communication</p> |   |
| <p>Use reliable communication?</p>  | <p>This parameter determines if reliable communication is to be used.</p> <p>Activating this function enables reliable KNX communication within the system (recommended for communication via WLAN). To use this function, the system must contain suitable components (e.g. the Gira G1 or other KNX/IP router) with the corresponding settings activated.</p> <p>If this setting is changed, the router will restart directly after the application has been programmed!</p> <p>The router should always be programmed separately.</p> <p><b>No</b>      Reliable communication is not used.</p> <p><b>Yes</b>      Reliable communication is used.</p> |

## 5 Appendix

### 5.1 Operation as an area or line coupler

#### Topology

As an area / line coupler, the KNX/IP router transmits telegrams between a lower-level line and the IP network. The function of the device is defined as follows with the physical address:

- Area coupler (AC) B.0.0 ( $1 \leq B \leq 15$ )
- Line coupler (LC) B.L.0 ( $1 \leq B \leq 15, 1 \leq L \leq 15$ )

Fundamentally the KNX/IP router can be used as a line coupler or an area coupler (compare with Figure 4).

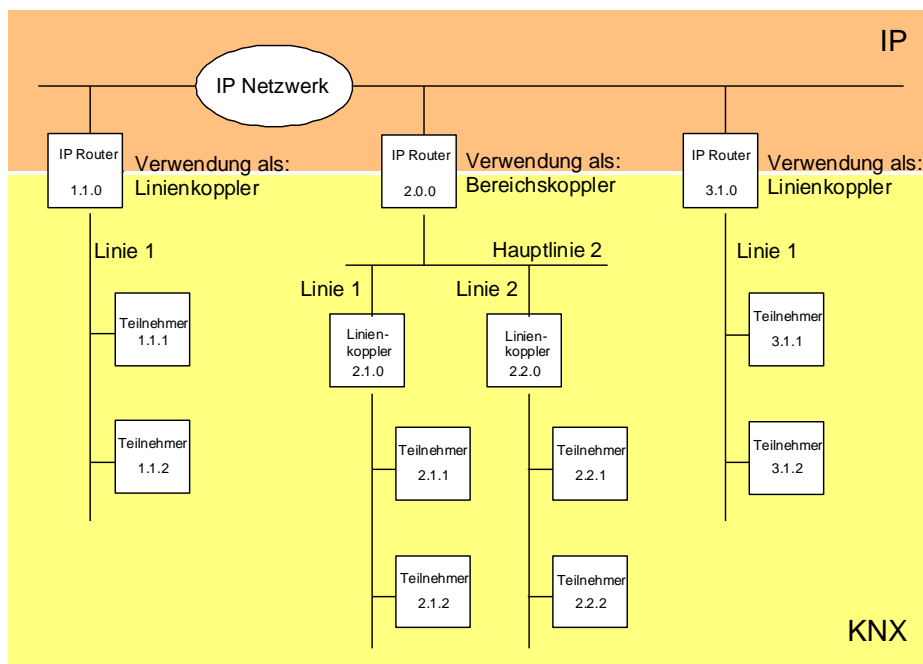


Figure 4: KNX/IP router as an area or line coupler

If the KNX/IP router is used as an area coupler with the physical address  $x.0.0$  ( $x = 1 \dots 15$ ), no additional IP routers may be used topologically 'lower than' this IP router as a line coupler  $x.y.0$  ( $y = 1 \dots 15$  – same area address) (compare with Figure 5).

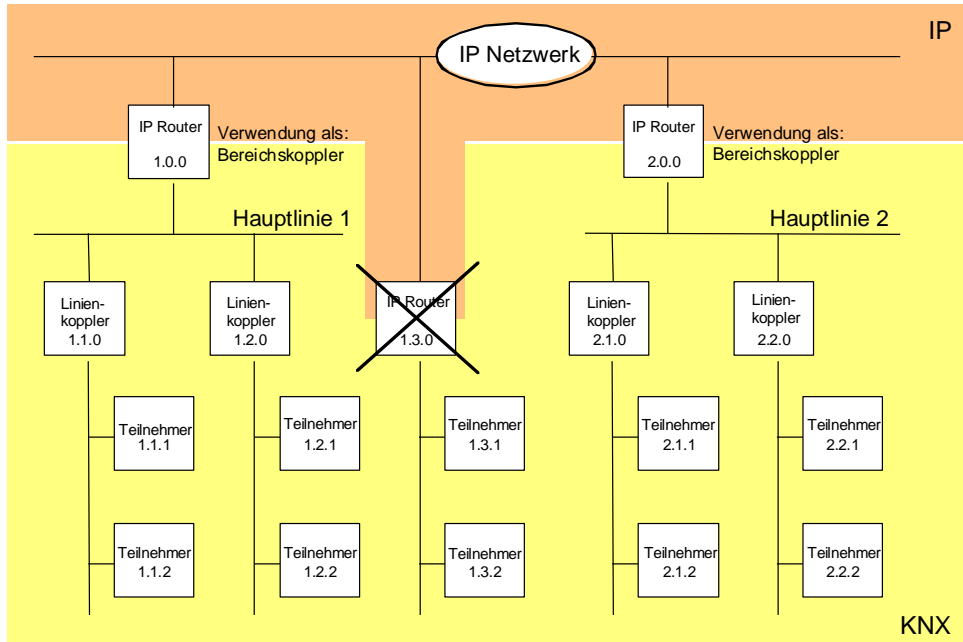


Figure 5: KNX/IP router as an area coupler

If the KNX/IP router is used as a line coupler with the physical address  $x.y.0$  ( $x = 1 \dots 15$ ,  $y = 1 \dots 15$ ), no additional IP routers with the same area address  $x.0.0$  may be used 'higher' in the system (compare with Figure 6).

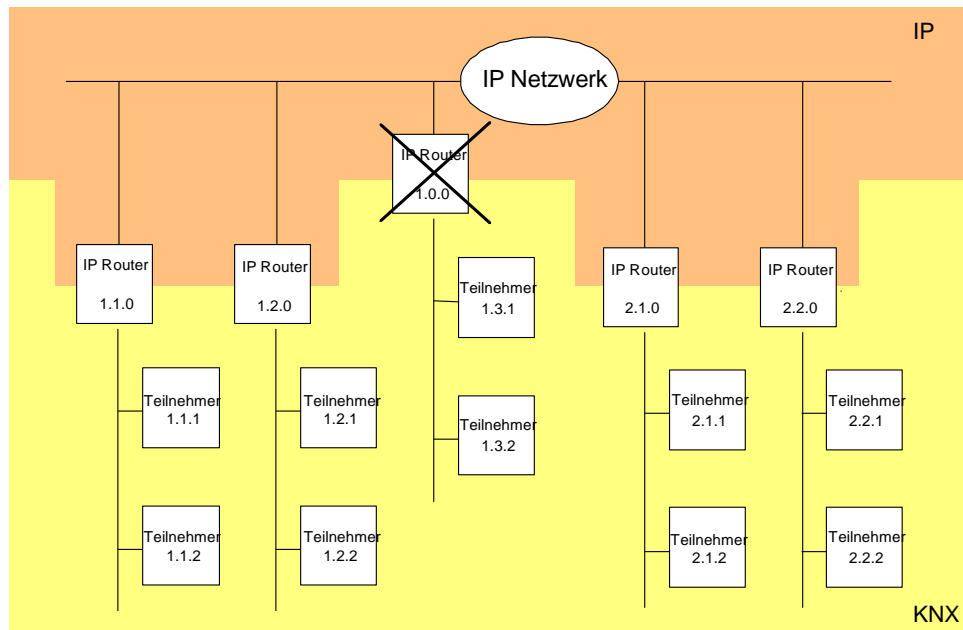


Figure 6: KNX/IP router as a line coupler

**Note:**

Error-free functioning of the KNX/IP router as an area or line coupler (KNXnet/IP routing) requires network components which support IP multicasting. Particularly, network / LAN routers must be able to be set or already be set to forward IP multicasting datagrams. For KNXnet/IP routing, the IP multicast address 224.0.23.12 is reserved internationally for this purpose.

## 5.2 Operation as an IP data interface in the ETS3

Via an IP data network and a KNX/IP router, a direct connection can be established from a PC or other data processing devices in the networks (e.g. visualisations) to the KNX/EIB. Thus, access to the bus is possible from every point in the IP data network.

The ETS3 and ETS4 facilitate the configuration of KNX/EIB installations via the existing IP data network and use the KNX/IP router such as a conventional serial RS232 or USB data interface to communicate with the bus. This also includes downloading from bus devices or the function of the bus or group monitor.

For stable communication via KNXnet/IP tunnelling, a second physical address (similar to the local physical address for an RS232 or USB connection) must be set via the ETS3 or ETS4.

The following steps must be carried out to configure the communication interfaces:

1. First the ETS3 must be started and the option dialogue of the communication properties must be called up  
(Extras → Options → Communication – compare with Figure 7).


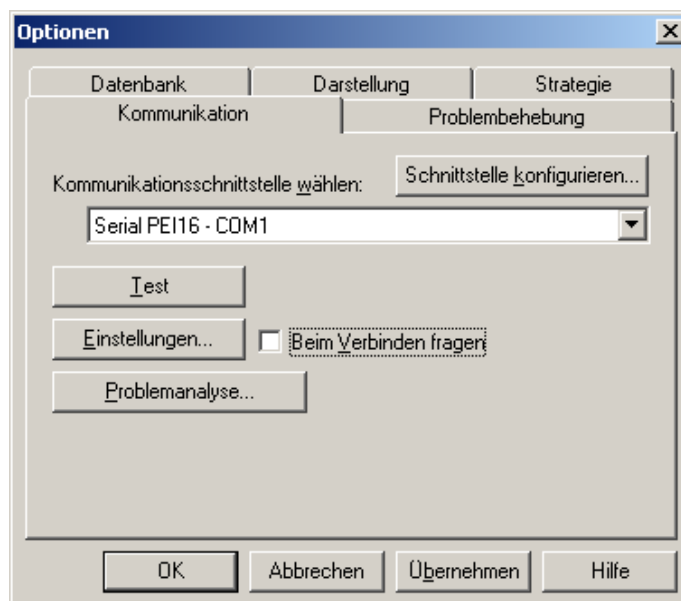



Figure 7: Option dialogue of the communication properties of the ETS3

2. Select the "Configure interface" button. The "ETS Connection Manager" window opens (compare with Figure 8).

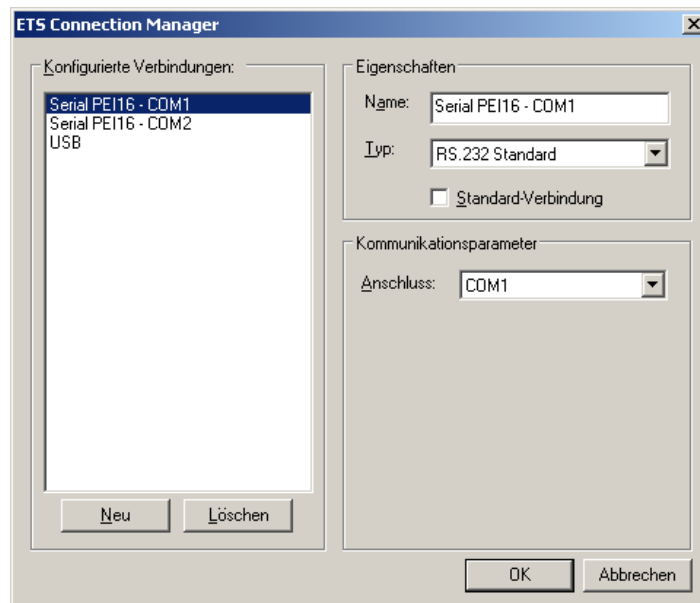

**Figure 8: ETS Connection Manager**

3. Create a new connection. For this, select the "New" button. Give the new connection a unique name. Select "KNXnet/IP" as type (compare with Figure 9). Subsequently the ETS automatically searches the IP data network for available IP communication devices.

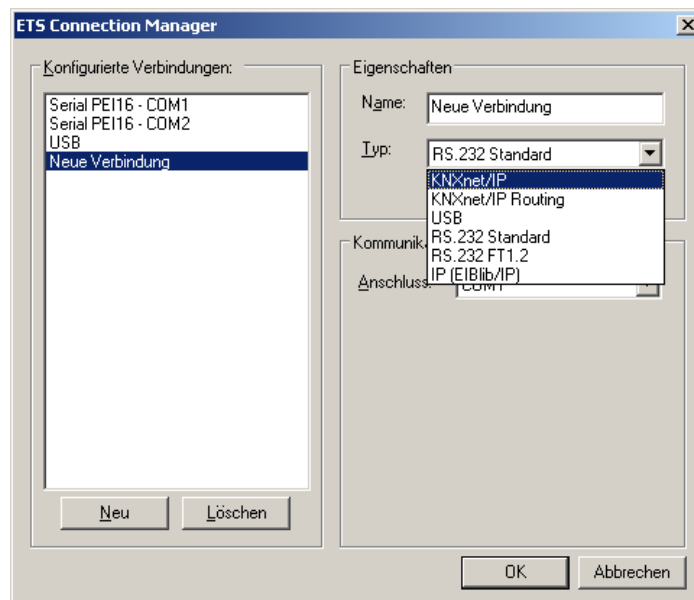

**Figure 9: Create new connection as KNXnet/IP**



4. In the "KNXnet/IP device" device list, all KNX/IP routers found in the IP network are listed (compare with Figure 10). The name assigned in the ETS (default "Gira KNX/IP router") and the IP address of the KNX/IP router are displayed. The (P) following this information signals an activated programming mode. In this way, individual devices can also be identified specifically in systems with several routers. In the device list, the KNX/IP router must be selected which should serve as a "data interface" in the configured connection.

By clicking the "Scan again" button, the ETS begins an additional scan process and again searches the IP network for IP routers.

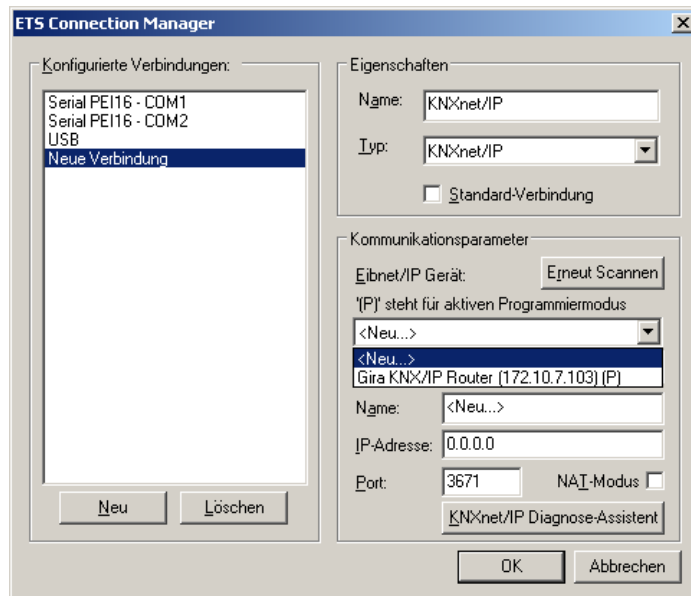


Figure 10: Device list under communication parameters with all IP routers found

5. Subsequently the configuration of the new connection can be completed by clicking the "OK" button. The communication parameters (compare with Figure 11) should remain unchanged.

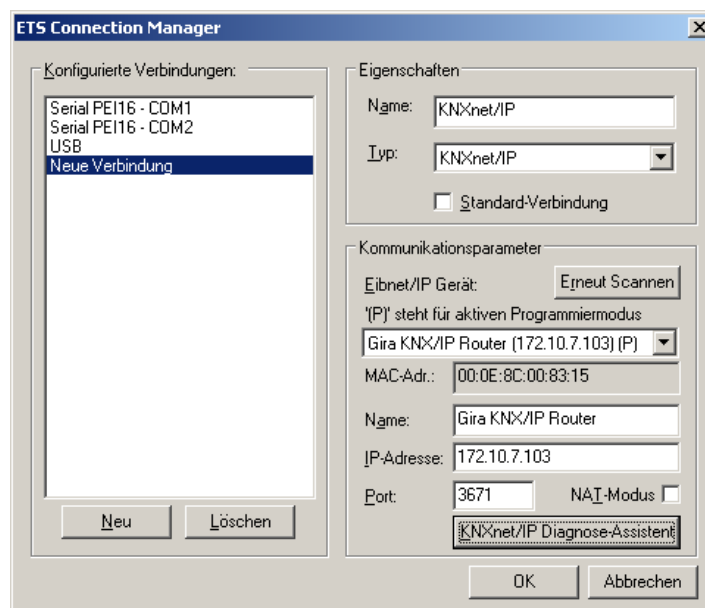


Figure 11: Complete interface configuration of the KNX/IP router

- For stable communication via KNXnet/IP tunnelling, a second physical address (similar to the local physical address for an RS232 or USB connection) must be set via the ETS. For this, select the new KNXnet/IP connection as the interface in the option dialogue of the communication properties (compare with Figure 12) and click the "Settings" button.

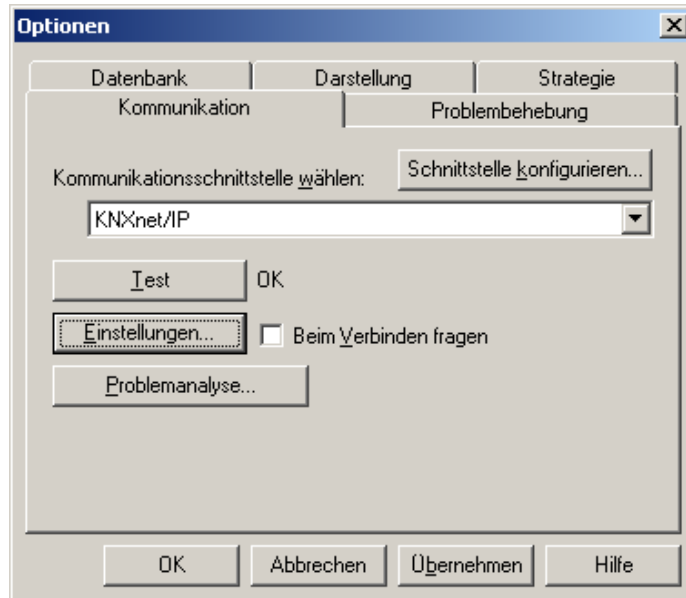


Figure 12: Select communication interface KNXnet/IP and open settings

- The settings of the local interface open (compare with Figure 13). In the "Physical address" field, the physical address of the IP data interface must now be entered. It must be ensured that an address from another device in the ETS project is not used (if necessary, check using the ETS "Is the address free?"). Following successful address assignment, a dummy device should be inserted in the ETS project at the topologically correct position.

In the state of delivery, the physical address "15.15.255" is preset.

By clicking the "OK" button, configuration of the IP data interface is completed. The IP connection can then be used.

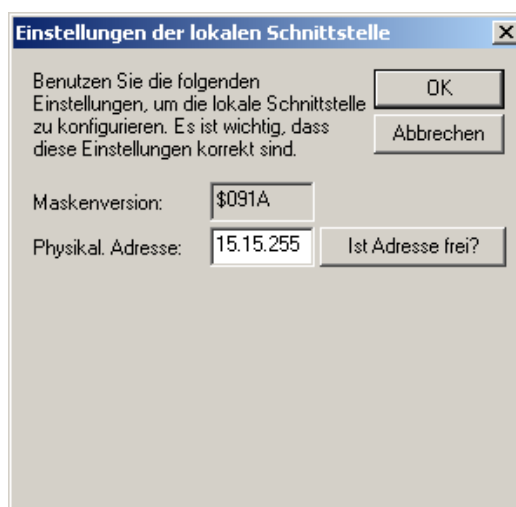


Figure 13: Settings of the local interface

### 5.3 Operation as an IP data interface in the ETS4

Via an IP data network and a KNX/IP router, a direct connection can be established from a PC or other data processing devices in the networks (e.g. visualisations) to the KNX/EIB. Thus, access to the bus is possible from every point in the IP data network.

The ETS3 and ETS4 facilitate the configuration of KNX/EIB installations via the existing IP data network and use the KNX/IP router such as a conventional serial RS232 or USB data interface to communicate with the bus. This also includes downloading from bus devices or the function of the bus or group monitor.

For stable communication via KNXnet/IP tunnelling, a second physical address (similar to the local physical address for an RS232 or USB connection) must be set via the ETS3 or ETS4.

The following steps must be carried out to configure the communication interfaces:

1. First the ETS4 must be started and the settings for communication must be opened (Settings->Communication – compare with Figure 14)

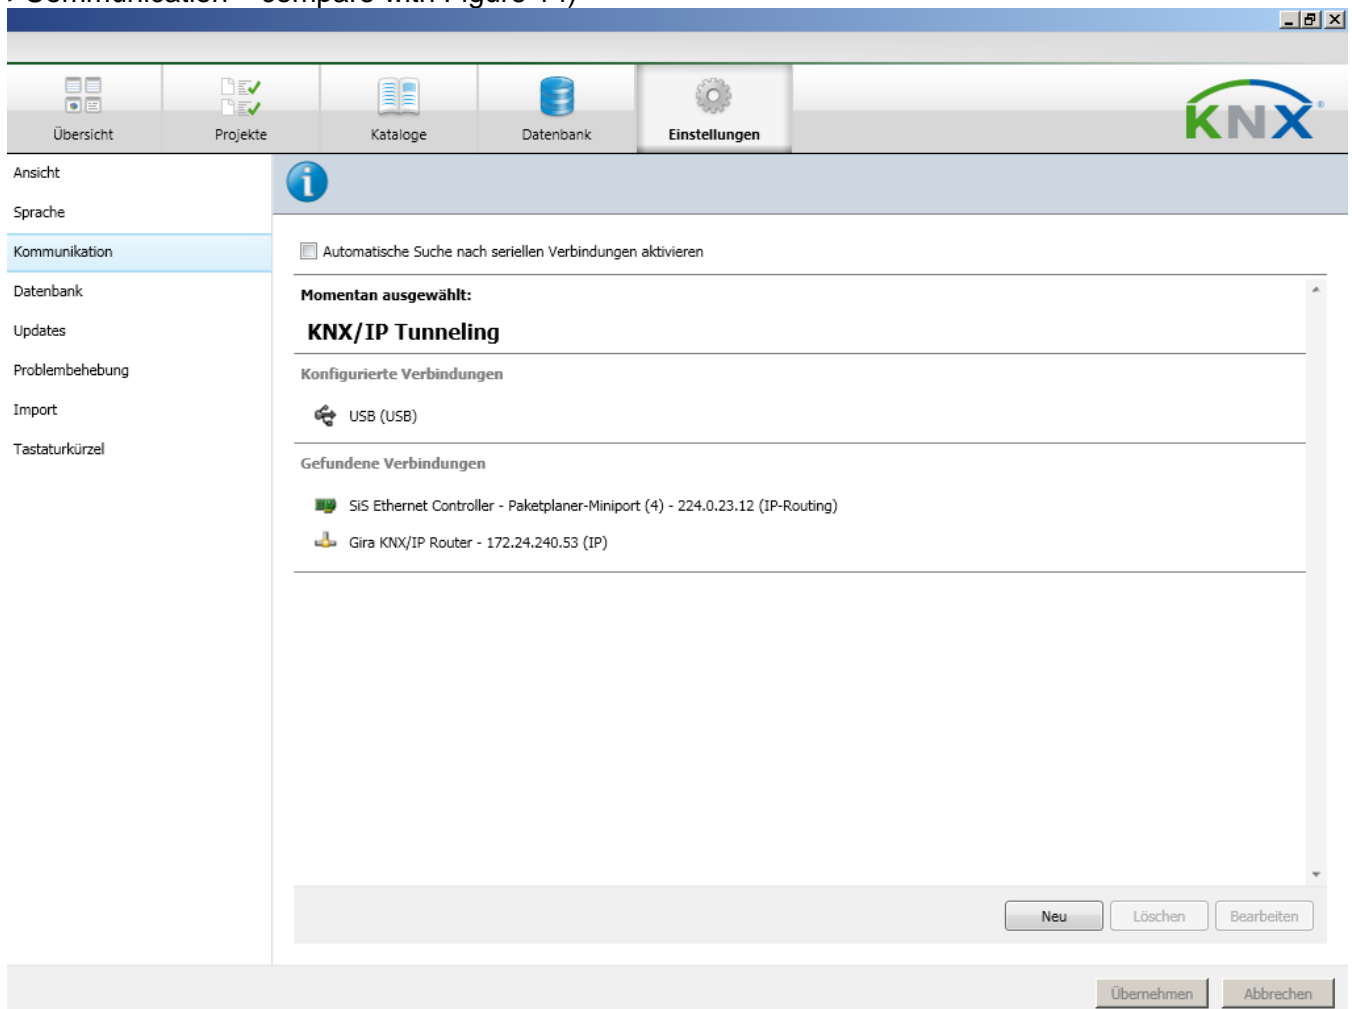


Figure 14: Communication settings in the ETS4

2. Then select the KNX/IP router in the device list under "Connections found" and click on "Select".

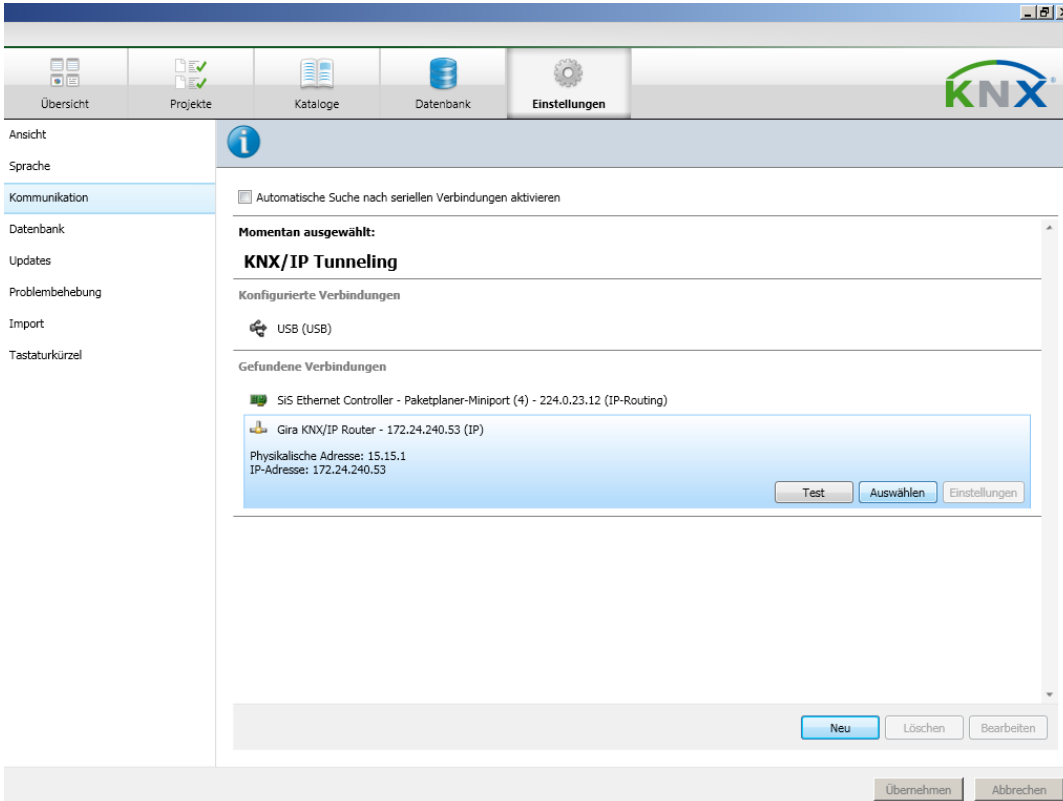


Figure 15: Select device for tunnelling connection in the ETS 4

3. The router now appears under "Configured connections".

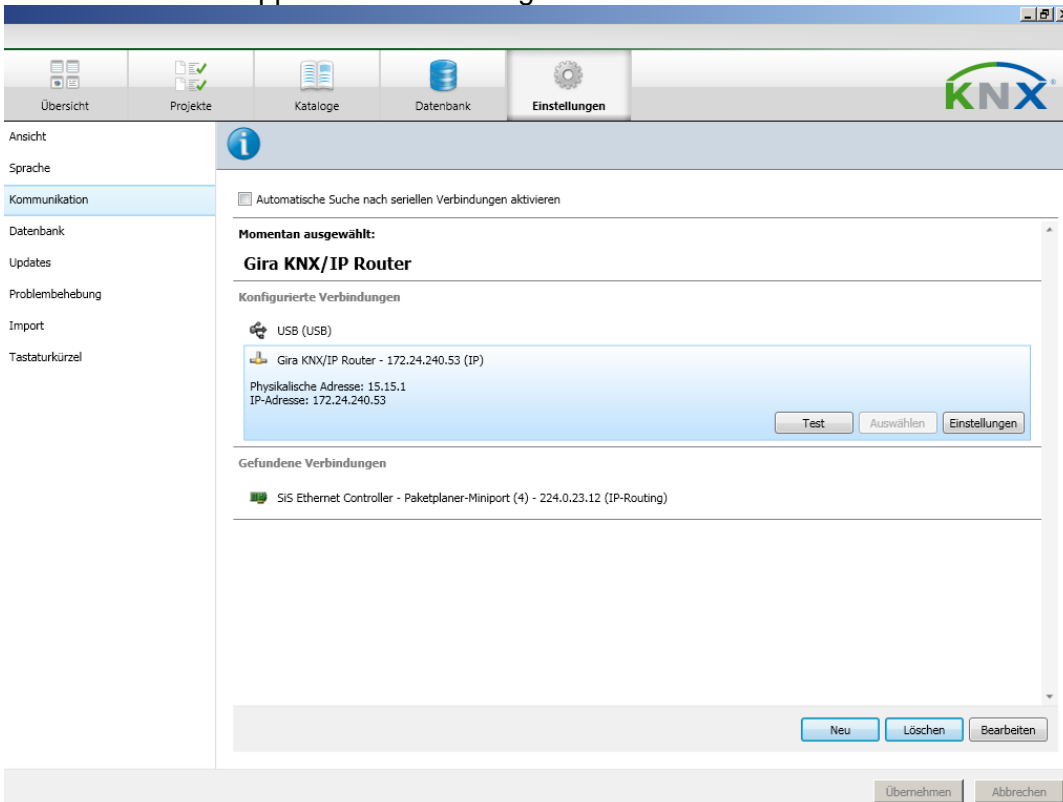


Figure 16: Device was selected in the ETS4

4. For stable communication via KNXnet/IP tunnelling, a second physical address (similar to the local physical address for an RS232 or USB connection) must be set via the ETS. For this, select the device under "Configured connections" and click "Settings".

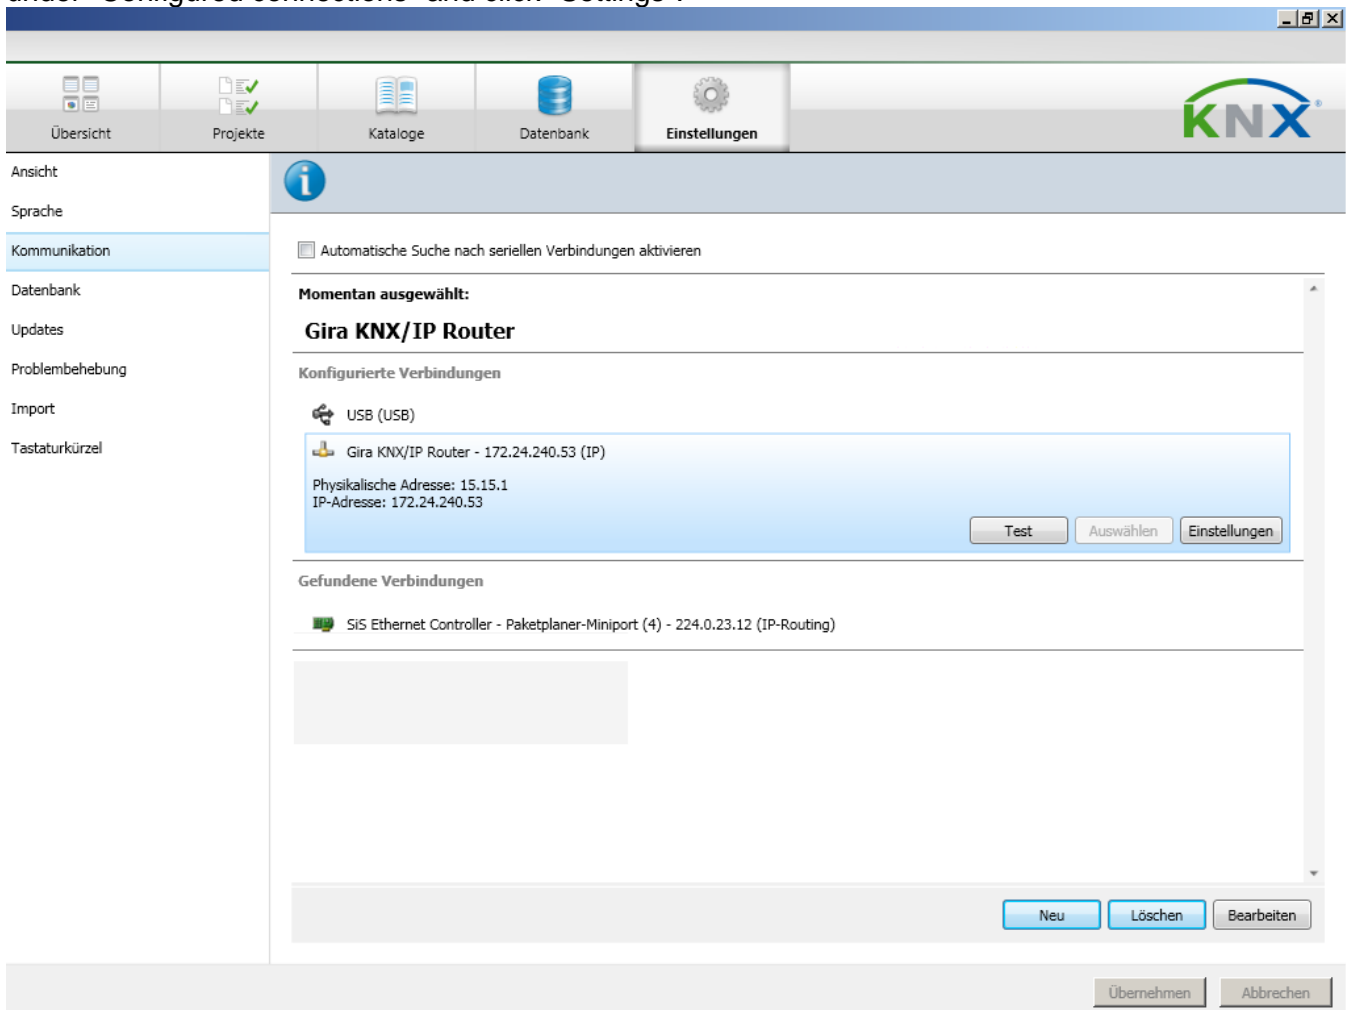


Figure 17: Select device in the ETS4 under "Configured connections"

5. The configuration dialogue opens. The desired address must now be entered in the field of the physical address of the device. It must be ensured that an address from another device in the ETS project is not used (if necessary, check using the ETS "Address free?").

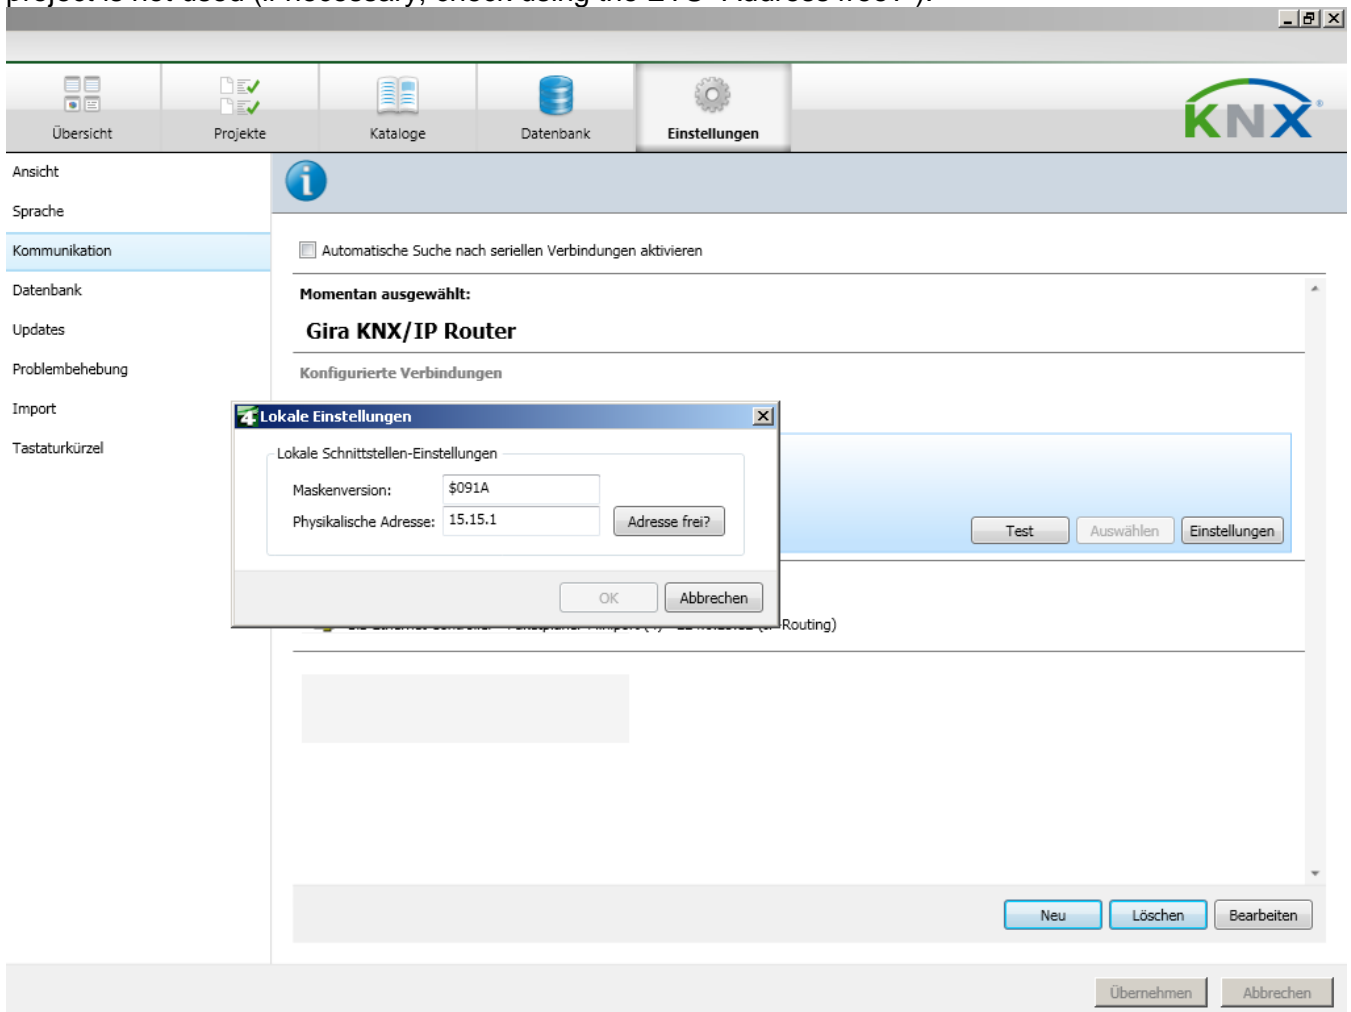


Figure 18: Setting the local physical address

## 6 License Agreement KNX/IP-Router Software

Hereinafter are the contract terms for your use of the software as the "licensee".

By accepting this agreement and installing the KNX/IP-Router software or putting the KNX/IP-Router into use, you conclude an agreement with Gira, Giersiepen GmbH & Co KG and agree to be legally bound to the terms of this agreement.

### 6.1 Definitions

**Licensor:** Gira, Giersiepen GmbH & Co KG, Radevormwald, Germany

**Licensee:** The legal recipient of the KNX/IP-Router software

**Firmware:** Software which is embedded on the KNX/IP-Router hardware and enables operation of the KNX/IP-Router.

**KNX/IP-Router Software:** The KNX/IP-Router software denotes all of the software provided for the KNX/IP-Router product, including the operating data. This particularly includes the firmware and the product database.

### 6.2 Subject matter of the agreement

The subject matter of this agreement is the KNX/IP-Router software provided on data carriers or through downloads, as well as the corresponding documentation in written and electronic form.

### 6.3 Rights of use of the KNX/IP-Router software

The licensor grants the licensee the non-exclusive, non-transferable right to use the KNX/IP-Router for an unlimited time in accordance with the following conditions for the purposes and applications specified in the valid version of the documentation (which shall be provided in printed form or also as online help or online documentation).

The licensee is obliged to ensure that each person who uses the program only does so as part of this license agreement and observes this license agreement.

### 6.4 Restriction of rights of use

- 6.4.1 The licensee is not authorised to use, copy, process or transfer the KNX/IP-Router software in whole or in part in any way other than described herein. Excluded from this is one (1) copy, which shall be produced by the licensee exclusively for archiving and backup purposes.
- 6.4.2 The licensee is not authorised to apply reverse-engineering techniques to the KNX/IP-Router software or to convert the KNX/IP-Router software to another form. Such techniques particularly include disassembly (conversion of the binary-coded computer instructions of an executable program into an assembler language which can be read by humans) or decompilation (conversion of binary-coded computer instructions or assembler instructions into source code in the form of high-level language instructions).
- 6.4.3 The firmware may only be installed and used on the hardware (KNX/IP-Router) approved by the licensor.
- 6.4.4 The KNX/IP-Router software may not be passed on to third parties, nor may it be made accessible to third parties.
- 6.4.5 The licensee is not authorised to rent or lease the KNX/IP-Router software or grant sublicenses for the program.

**6.4.6** The licensee requires written approval from the licensor to create and distribute software which is derived from the KNX/IP-Router software.

**6.4.7** The mechanisms of the license management and copying protection of the KNX/IP-Router software may not be analysed, published, circumvented or disabled.

## **6.5 Ownership, confidentiality**

**6.5.1** The KNX/IP-Router software and the documentation (which shall be provided in printed form or also as online help or online documentation) are business secrets of the licensor and/or the object of copyright and/or other rights and shall continue to belong to the licensor. The licensee shall observe these rights.

**6.5.2** Neither the software nor the data backup copy nor the documentation (which shall be provided in printed form or also as online help or online documentation) may be passed on to third parties at any point in time, in whole or in part, for a charge or free of charge.

## **6.6 Changes, additional deliveries**

The KNX/IP-Router software and the documentation (which shall be provided in printed form or also as online help or online documentation) shall be subject to possible changes by the licensor.

## **6.7 Warranty**

The KNX/IP-Router software shall be delivered together with software from third parties as listed in section 11. No warranty is provided for software from third parties.

**6.7.1** The KNX/IP-Router software and the documentation (which shall be provided in printed form or also as online help or online documentation) shall be provided to the licensee in the respective valid version. The warranty period for the KNX/IP-Router software is twenty-four (24) months. During this time the licensor shall provide the following warranty:

- The software shall be free of material and manufacturing defects when turned over to the customer.
- The software shall function in accordance with the documentation included with it in the respective valid version.
- The software shall be runnable on the computer stations specified by the licensor.

The warranty shall be fulfilled with the supply of spare parts.

**6.7.2** Otherwise, no warranty shall be provided for the freedom from faults of the KNX/IP-Router software and its data structures from defects. Nor does the warranty cover defects due to improper use or other causes outside the influence of the licensor. Any additional warranty claims shall be excluded.

## **6.8 Liability**

The licensor shall not be liable for damages due to loss of profit, data loss or any other financial loss resulting as part of the use of the KNX/IP-Router software, even if the licensor is aware of the possibility of damage of that type.

This limitation of liability is valid for all damage claims of the licensee, regardless of the legal basis. In any case, liability is limited to the purchase price of the product.



The exclusion of liability does not apply to damage caused by premeditation or gross negligence on the part of the licensor. Furthermore, claims based on the statutory regulations for product liability shall remain intact.

## 6.9 Applicable law

This agreement is subject to the laws of the Federal Republic of Germany.  
The place of jurisdiction is Cologne, Germany.

## 6.10 Termination

This agreement and the rights granted herein shall end if the licensee fails to fulfil one or more provisions of this agreement or terminates this agreement in writing. The KNX/IP-Router software and the documentation turned over (which is provided in printed form or also as online help or online documentation) including all copies shall in this case be returned immediately and without being requested to do so. No claim to reimbursement of the price paid shall be accepted in this case. The license for use of the KNX/IP-Router software shall expire upon the termination of the agreement. In this case, the KNX/IP-Router product must be taken out of operation. Further use of the KNX/IP-Router without a license is precluded.  
The start-up software and the visualisation software must be uninstalled and all copies must be destroyed or returned to the licensor.

## 6.11 Subsidiary agreements and changes to the agreement

Subsidiary agreements and changes to the agreement shall only be valid in writing.

## 6.12 Exception

All rights not expressly mentioned in this agreement are reserved.

## 7 Open Source Software

This product uses software from third-party sources by the following authors.

Aleksey Sanin  
 Anthony Green  
 Carnegie Mellon University  
 Clark Cooper  
 Daniel Veillard  
 Digital Equipment Corporation  
 Expat maintainers  
 Free Software Foundation, Inc.  
 Intel Corporation  
 Internet Systems Consortium  
 Jean-loup Gailly

Julian Seward  
 libpcap maintainers  
 Mark Adler  
 Phil Katz  
 Philip Hazel  
 Red Hat Software, Inc  
 Regents of the University of California  
 Thai Open Source Software Center Ltd  
 The D-Bus Authors  
 The OpenSSL Project  
 University of Cambridge

This product uses software from third-party sources which are used within the scope of the GNU General Public License (GPL) or Lesser GNU General Public License LGPL.

The software packages used in this product which are licensed under the GPL/LGPL are described in the following.

|                         |   |
|-------------------------|---|
| Software package        | U-Boot  |
| Version of the software | 2012.07   |
| Supplier                | <a href="http://www.denx.de/wiki/U-Boot/WebHome">http://www.denx.de/wiki/U-Boot/WebHome</a> |
| License                 | GNU GPL, Version 2, June 1991   |
| Copyright notice        | Copyright © 2000-2010 by Wolfgang Denk et al.   |

|                         |   |
|-------------------------|---|
| Software package        | GNU/Linux   |
| Version of the software | 3.2.20  |
| Supplier                | <a href="http://kernel.org">http://kernel.org</a> |
| License                 | GNU GPL, Version 2, June 1991                     |
| Copyright notice        | Copyright © 1992-2010 by Linus Torvalds et al.    |

|                         |   |
|-------------------------|---|
| Software package        | Avahi   |
| Version of the software | 0.6.31  |
| Supplier                | <a href="http://avahi.org">http://avahi.org</a> |
| License                 | GNU LGPL, Version 2.1, February 1999            |
| Copyright notice        | Copyright © 2010 Avahi developers               |

|                         |   |
|-------------------------|---|
| Software package        | Buildroot   |
| Version of the software | 2012.11.1   |
| Supplier                | <a href="http://buildroot.org">http://buildroot.org</a>             |
| License                 | GNU GPL, Version 2, June 1991                                       |
| Copyright notice        | Copyright © 1999-2005 Erik Andersen, 2006-2012 Buildroot developers |

|                         |   |
|-------------------------|---|
| Software package        | Busybox   |
| Version of the software | 1.20.2  |
| Supplier                | <a href="http://busybox.org">http://busybox.org</a> |
| License                 | GNU GPL, Version 2, June 1991                       |
| Copyright notice        | Copyright © 2004-2014 Busybox developers            |

|                         |   |
|-------------------------|---|
| Software package        | e2fsprogs   |
| Version of the software | 1.42.6  |
| Supplier                | <a href="http://e2fsprogs.sourceforge.net">http://e2fsprogs.sourceforge.net</a> |
| License                 | GNU GPL, Version 2, June 1991<br>GNU LGPL, Version 2.1, February 1999           |
| Copyright notice        | Copyright © 2007 Theodore Ts'o  |

|                         |   |
|-------------------------|---|
| Software package        | fuse  |
| Version of the software | 2.9.2   |
| Supplier                | <a href="http://fuse.sourceforge.net">http://fuse.sourceforge.net</a> |
| License                 | GNU GPL, Version 2, June 1991<br>GNU LGPL, Version 2.1, February 1999 |
| Copyright notice        | Copyright © 2001-2007 Miklos Szeredi                                  |

|                         |   |
|-------------------------|---|
| Software package        | GLib  |
| Version of the software | 2.30.3  |
| Supplier                | <a href="http://developer.gnome.org/glib/">http://developer.gnome.org/glib/</a> |
| License                 | GNU LGPL, Version 2.1, February 1999  |
| Copyright notice        | Copyright © 2010 the Glib Team  |

|                         |   |
|-------------------------|---|
| Software package        | GNU C Library (GLIBC)   |
| Version of the software | 2.15  |
| Supplier                | <a href="http://www.gnu.org/software/libc/">http://www.gnu.org/software/libc/</a>   |
| License                 | GNU LGPL, Version 2.1, February 1999  |
| Copyright notice        | Copyright © 1996-2010 by Roland McGrath et al.<br><a href="http://sourceware.org/glibc/wiki/MAINTAINERS">http://sourceware.org/glibc/wiki/MAINTAINERS</a> |

|                         |                               |
|-------------------------|-------------------------------|
| Software package        | kmod                          |
| Version of the software | 11                            |
| Supplier                |                               |
| License                 | GNU GPL, Version 2, June 1991 |
| Copyright notice        |                               |

|                         |                                      |
|-------------------------|--------------------------------------|
| Software package        | libdaemon                            |
| Version of the software | 0.14                                 |
| Supplier                |                                      |
| License                 | GNU LGPL, Version 2.1, February 1999 |
| Copyright notice        |                                      |

|                         |                               |
|-------------------------|-------------------------------|
| Software package        | mtd-utils                     |
| Version of the software | 1.5.0                         |
| Supplier                |                               |
| License                 | GNU GPL, Version 2, June 1991 |
| Copyright notice        |                               |

|                         |                               |
|-------------------------|-------------------------------|
| Software package        | udev                          |
| Version of the software | 182                           |
| Supplier                |                               |
| License                 | GNU GPL, Version 2, June 1991 |
| Copyright notice        |                               |

---

|                         |                               |
|-------------------------|-------------------------------|
| Software package        | util-linux                    |
| Version of the software | 2.20.1                        |
| Supplier                |                               |
| License                 | GNU GPL, Version 2, June 1991 |
| Copyright notice        |                               |

The license texts of the GPL and LGPL are available via the following web page:  
<http://www.gnu.org/licenses/licenses.html>

License text: Gira does not assume any liability or provide a warranty for this software.

The source code for this software can be obtained via the e-mail address [info@gira.de](mailto:info@gira.de).

This offer is valid for three years after the discontinuation of the service for this product.

## 7.1 GNU GPL, Version 2, June 1991

GNU GENERAL PUBLIC LICENSE  
Version 2, June 1991

Copyright (C) 1989, 1991 Free Software Foundation, Inc.,  
51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA  
Everyone is permitted to copy and distribute verbatim copies  
of this license document, but changing it is not allowed.

### Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software--to make sure the software is free for all its users. This General Public License applies to most of the Free Software Foundation's software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Lesser General Public License instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps: (1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all.

The precise terms and conditions for copying, distribution and modification follow.

GNU GENERAL PUBLIC LICENSE  
TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The "Program", below, refers to any such program or work, and a "work based on the Program" means either the Program or any derivative work under copyright law:

that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term "modification".) Each licensee is addressed as "you".

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.

b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.

c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of

Sections 1 and 2 above provided that you also do one of the following:

- a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.

6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.

7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent

license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.

10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

#### NO WARRANTY

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING



OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

END OF TERMS AND CONDITIONS

## How to Apply These Terms to Your New Programs

If you develop a new program, and you want it to be of the greatest possible use to the public, the best way to achieve this is to make it free software which everyone can redistribute and change under these terms.

To do so, attach the following notices to the program. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the "copyright" line and a pointer to where the full notice is found.

```
<one line to give the program's name and a brief idea of what it does.>  
Copyright (C) <year> <name of author>
```

```
This program is free software; you can redistribute it and/or modify  
it under the terms of the GNU General Public License as published by  
the Free Software Foundation; either version 2 of the License, or  
(at your option) any later version.
```

```
This program is distributed in the hope that it will be useful,  
but WITHOUT ANY WARRANTY; without even the implied warranty of  
MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the  
GNU General Public License for more details.
```

```
You should have received a copy of the GNU General Public License along  
with this program; if not, write to the Free Software Foundation, Inc.,  
51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA.
```

Also add information on how to contact you by electronic and paper mail.

If the program is interactive, make it output a short notice like this when it starts in an interactive mode:

```
Gnomovision version 69, Copyright (C) year name of author  
Gnomovision comes with ABSOLUTELY NO WARRANTY; for details type `show w'.  
This is free software, and you are welcome to redistribute it  
under certain conditions; type `show c' for details.
```

The hypothetical commands `show w' and `show c' should show the appropriate parts of the General Public License. Of course, the commands you use may be called something other than `show w' and `show c'; they could even be mouse-clicks or menu items--whatever suits your program.

You should also get your employer (if you work as a programmer) or your school, if any, to sign a "copyright disclaimer" for the program, if necessary. Here is a sample; alter the names:

```
Yoyodyne, Inc., hereby disclaims all copyright interest in the program  
'Gnomovision' (which makes passes at compilers) written by James Hacker.
```

```
<signature of Ty Coon>, 1 April 1989  
Ty Coon, President of Vice
```

This General Public License does not permit incorporating your program into proprietary programs. If your program is a subroutine library, you may consider it more useful to permit linking proprietary applications with the library. If this is what you want to do, use the GNU Lesser General Public License instead of this License.

## 7.2 GNU LGPL, Version 2.1, February 1999

GNU LESSER GENERAL PUBLIC LICENSE  
Version 2.1, February 1999

Copyright (C) 1991, 1999 Free Software Foundation, Inc.  
51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA  
Everyone is permitted to copy and distribute verbatim copies  
of this license document, but changing it is not allowed.

[This is the first released version of the Lesser GPL. It also counts  
as the successor of the GNU Library Public License, version 2, hence  
the version number 2.1.]

### Preamble

The licenses for most software are designed to take away your  
freedom to share and change it. By contrast, the GNU General Public  
Licenses are intended to guarantee your freedom to share and change  
free software--to make sure the software is free for all its users.

This license, the Lesser General Public License, applies to some  
specially designated software packages--typically libraries--of the  
Free Software Foundation and other authors who decide to use it. You  
can use it too, but we suggest you first think carefully about whether  
this license or the ordinary General Public License is the better  
strategy to use in any particular case, based on the explanations below.

When we speak of free software, we are referring to freedom of use,  
not price. Our General Public Licenses are designed to make sure that  
you have the freedom to distribute copies of free software (and charge  
for this service if you wish); that you receive source code or can get  
it if you want it; that you can change the software and use pieces of  
it in new free programs; and that you are informed that you can do  
these things.

To protect your rights, we need to make restrictions that forbid  
distributors to deny you these rights or to ask you to surrender these  
rights. These restrictions translate to certain responsibilities for  
you if you distribute copies of the library or if you modify it.

For example, if you distribute copies of the library, whether gratis  
or for a fee, you must give the recipients all the rights that we gave  
you. You must make sure that they, too, receive or can get the source  
code. If you link other code with the library, you must provide  
complete object files to the recipients, so that they can relink them  
with the library after making changes to the library and recompiling  
it. And you must show them these terms so they know their rights.

We protect your rights with a two-step method: (1) we copyright the  
library, and (2) we offer you this license, which gives you legal  
permission to copy, distribute and/or modify the library.

To protect each distributor, we want to make it very clear that  
there is no warranty for the free library. Also, if the library is  
modified by someone else and passed on, the recipients should know  
that what they have is not the original version, so that the original  
author's reputation will not be affected by problems that might be  
introduced by others.

Finally, software patents pose a constant threat to the existence of  
any free program. We wish to make sure that a company cannot  
effectively restrict the users of a free program by obtaining a  
restrictive license from a patent holder. Therefore, we insist that  
any patent license obtained for a version of the library must be  
consistent with the full freedom of use specified in this license.

Most GNU software, including some libraries, is covered by the

ordinary GNU General Public License. This license, the GNU Lesser General Public License, applies to certain designated libraries, and is quite different from the ordinary General Public License. We use this license for certain libraries in order to permit linking those libraries into non-free programs.

When a program is linked with a library, whether statically or using a shared library, the combination of the two is legally speaking a combined work, a derivative of the original library. The ordinary General Public License therefore permits such linking only if the entire combination fits its criteria of freedom. The Lesser General Public License permits more lax criteria for linking other code with the library.

We call this license the "Lesser" General Public License because it does less to protect the user's freedom than the ordinary General Public License. It also provides other free software developers less of an advantage over competing non-free programs. These disadvantages are the reason we use the ordinary General Public License for many libraries. However, the Lesser license provides advantages in certain special circumstances.

For example, on rare occasions, there may be a special need to encourage the widest possible use of a certain library, so that it becomes a de-facto standard. To achieve this, non-free programs must be allowed to use the library. A more frequent case is that a free library does the same job as widely used non-free libraries. In this case, there is little to gain by limiting the free library to free software only, so we use the Lesser General Public License.

In other cases, permission to use a particular library in non-free programs enables a greater number of people to use a large body of free software. For example, permission to use the GNU C Library in non-free programs enables many more people to use the whole GNU operating system, as well as its variant, the GNU/Linux operating system.

Although the Lesser General Public License is less protective of the users' freedom, it does ensure that the user of a program that is linked with the Library has the freedom and the wherewithal to run that program using a modified version of the Library.

The precise terms and conditions for copying, distribution and modification follow. Pay close attention to the difference between a "work based on the library" and a "work that uses the library". The former contains code derived from the library, whereas the latter must be combined with the library in order to run.

## GNU LESSER GENERAL PUBLIC LICENSE TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License Agreement applies to any software library or other program which contains a notice placed by the copyright holder or other authorized party saying it may be distributed under the terms of this Lesser General Public License (also called "this License"). Each licensee is addressed as "you".

A "library" means a collection of software functions and/or data prepared so as to be conveniently linked with application programs (which use some of those functions and data) to form executables.

The "Library", below, refers to any such software library or work which has been distributed under these terms. A "work based on the Library" means either the Library or any derivative work under copyright law: that is to say, a work containing the Library or a portion of it, either verbatim or with modifications and/or translated straightforwardly into another language. (Hereinafter, translation is included without limitation in the term "modification".)

"Source code" for a work means the preferred form of the work for making modifications to it. For a library, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the library.

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running a program using the Library is not restricted, and output from such a program is covered only if its contents constitute a work based on the Library (independent of the use of the Library in a tool for writing it). Whether that is true depends on what the Library does and what the program that uses the Library does.

1. You may copy and distribute verbatim copies of the Library's complete source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and distribute a copy of this License along with the Library.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Library or any portion of it, thus forming a work based on the Library, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

- a) The modified work must itself be a software library.
- b) You must cause the files modified to carry prominent notices stating that you changed the files and the date of any change.
- c) You must cause the whole of the work to be licensed at no charge to all third parties under the terms of this License.
- d) If a facility in the modified Library refers to a function or a table of data to be supplied by an application program that uses the facility, other than as an argument passed when the facility is invoked, then you must make a good faith effort to ensure that, in the event an application does not supply such function or table, the facility still operates, and performs whatever part of its purpose remains meaningful.

(For example, a function in a library to compute square roots has a purpose that is entirely well-defined independent of the application. Therefore, Subsection 2d requires that any application-supplied function or table used by this function must be optional: if the application does not supply it, the square root function must still compute square roots.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Library, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Library, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Library.

In addition, mere aggregation of another work not based on the Library with the Library (or with a work based on the Library) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may opt to apply the terms of the ordinary GNU General Public License instead of this License to a given copy of the Library. To do this, you must alter all the notices that refer to this License, so that they refer to the ordinary GNU General Public License, version 2, instead of to this License. (If a newer version than version 2 of the ordinary GNU General Public License has appeared, then you can specify that version instead if you wish.) Do not make any other change in these notices.

Once this change is made in a given copy, it is irreversible for that copy, so the ordinary GNU General Public License applies to all subsequent copies and derivative works made from that copy.

This option is useful when you wish to copy part of the code of the Library into a program that is not a library.

4. You may copy and distribute the Library (or a portion or derivative of it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange.

If distribution of object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place satisfies the requirement to distribute the source code, even though third parties are not compelled to copy the source along with the object code.

5. A program that contains no derivative of any portion of the Library, but is designed to work with the Library by being compiled or linked with it, is called a "work that uses the Library". Such a work, in isolation, is not a derivative work of the Library, and therefore falls outside the scope of this License.

However, linking a "work that uses the Library" with the Library creates an executable that is a derivative of the Library (because it contains portions of the Library), rather than a "work that uses the library". The executable is therefore covered by this License. Section 6 states terms for distribution of such executables.

When a "work that uses the Library" uses material from a header file that is part of the Library, the object code for the work may be a derivative work of the Library even though the source code is not. Whether this is true is especially significant if the work can be linked without the Library, or if the work is itself a library. The threshold for this to be true is not precisely defined by law.

If such an object file uses only numerical parameters, data structure layouts and accessors, and small macros and small inline functions (ten lines or less in length), then the use of the object file is unrestricted, regardless of whether it is legally a derivative work. (Executables containing this object code plus portions of the Library will still fall under Section 6.)

Otherwise, if the work is a derivative of the Library, you may distribute the object code for the work under the terms of Section 6. Any executables containing that work also fall under Section 6, whether or not they are linked directly with the Library itself.

6. As an exception to the Sections above, you may also combine or link a "work that uses the Library" with the Library to produce a work containing portions of the Library, and distribute that work

under terms of your choice, provided that the terms permit modification of the work for the customer's own use and reverse engineering for debugging such modifications.

You must give prominent notice with each copy of the work that the Library is used in it and that the Library and its use are covered by this License. You must supply a copy of this License. If the work during execution displays copyright notices, you must include the copyright notice for the Library among them, as well as a reference directing the user to the copy of this License. Also, you must do one of these things:

- a) Accompany the work with the complete corresponding machine-readable source code for the Library including whatever changes were used in the work (which must be distributed under Sections 1 and 2 above); and, if the work is an executable linked with the Library, with the complete machine-readable "work that uses the Library", as object code and/or source code, so that the user can modify the Library and then relink to produce a modified executable containing the modified Library. (It is understood that the user who changes the contents of definitions files in the Library will not necessarily be able to recompile the application to use the modified definitions.)
- b) Use a suitable shared library mechanism for linking with the Library. A suitable mechanism is one that (1) uses at run time a copy of the library already present on the user's computer system, rather than copying library functions into the executable, and (2) will operate properly with a modified version of the library, if the user installs one, as long as the modified version is interface-compatible with the version that the work was made with.
- c) Accompany the work with a written offer, valid for at least three years, to give the same user the materials specified in Subsection 6a, above, for a charge no more than the cost of performing this distribution.
- d) If distribution of the work is made by offering access to copy from a designated place, offer equivalent access to copy the above specified materials from the same place.
- e) Verify that the user has already received a copy of these materials or that you have already sent this user a copy.

For an executable, the required form of the "work that uses the Library" must include any data and utility programs needed for reproducing the executable from it. However, as a special exception, the materials to be distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

It may happen that this requirement contradicts the license restrictions of other proprietary libraries that do not normally accompany the operating system. Such a contradiction means you cannot use both them and the Library together in an executable that you distribute.

7. You may place library facilities that are a work based on the Library side-by-side in a single library together with other library facilities not covered by this License, and distribute such a combined library, provided that the separate distribution of the work based on the Library and of the other library facilities is otherwise permitted, and provided that you do these two things:

- a) Accompany the combined library with a copy of the same work based on the Library, uncombined with any other library facilities. This must be distributed under the terms of the

Sections above.

b) Give prominent notice with the combined library of the fact that part of it is a work based on the Library, and explaining where to find the accompanying uncombined form of the same work.

8. You may not copy, modify, sublicense, link with, or distribute the Library except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense, link with, or distribute the Library is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

9. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Library or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Library (or any work based on the Library), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Library or works based on it.

10. Each time you redistribute the Library (or any work based on the Library), the recipient automatically receives a license from the original licensor to copy, distribute, link with or modify the Library subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties with this License.

11. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Library at all. For example, if a patent license would not permit royalty-free redistribution of the Library by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Library.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply, and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

12. If the distribution and/or use of the Library is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Library under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

13. The Free Software Foundation may publish revised and/or new versions of the Lesser General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Library specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Library does not specify a license version number, you may choose any version ever published by the Free Software Foundation.

14. If you wish to incorporate parts of the Library into other free programs whose distribution conditions are incompatible with these, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

#### NO WARRANTY

15. BECAUSE THE LIBRARY IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE LIBRARY, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE LIBRARY "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE LIBRARY IS WITH YOU. SHOULD THE LIBRARY PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

16. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE LIBRARY AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE LIBRARY (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE LIBRARY TO OPERATE WITH ANY OTHER SOFTWARE), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

#### END OF TERMS AND CONDITIONS

##### How to Apply These Terms to Your New Libraries

If you develop a new library, and you want it to be of the greatest possible use to the public, we recommend making it free software that everyone can redistribute and change. You can do so by permitting redistribution under these terms (or, alternatively, under the terms of the ordinary General Public License).

To apply these terms, attach the following notices to the library. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the "copyright" line and a pointer to where the full notice is found.

```
<one line to give the library's name and a brief idea of what it does.>  
Copyright (C) <year> <name of author>
```

```
This library is free software; you can redistribute it and/or  
modify it under the terms of the GNU Lesser General Public  
License as published by the Free Software Foundation; either  
version 2.1 of the License, or (at your option) any later version.
```



This library is distributed in the hope that it will be useful,  
but WITHOUT ANY WARRANTY; without even the implied warranty of  
MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU  
Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public  
License along with this library; if not, write to the Free Software  
Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA

Also add information on how to contact you by electronic and paper mail.

You should also get your employer (if you work as a programmer) or your  
school, if any, to sign a "copyright disclaimer" for the library, if  
necessary. Here is a sample; alter the names:

Yoyodyne, Inc., hereby disclaims all copyright interest in the  
library `Frob' (a library for tweaking knobs) written by James Random Hacker.

<signature of Ty Coon>, 1 April 1990  
Ty Coon, President of Vice

That's all there is to it!